


Contents


1. Product view	3
2. Home	5
3. Note	6
4. Reader	14
5. Application	29
6. Settings	35
7. Product specification	48
8. Accessories	49
9. Safety guide	49
10. Warranty terms	50
11. Q & A	53
12. Statement	56

1. Product view


Front

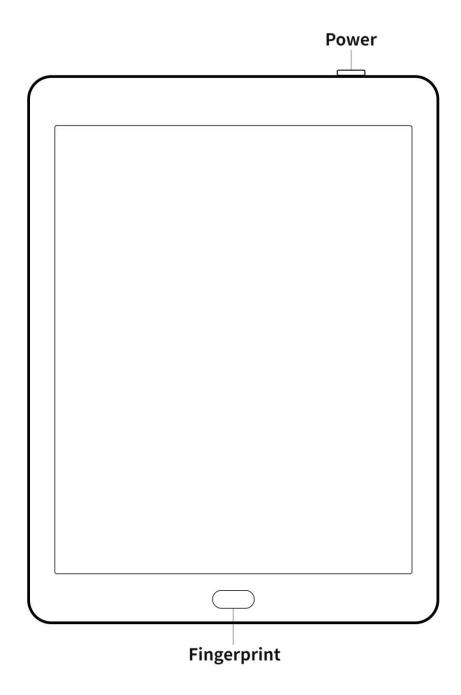

Back

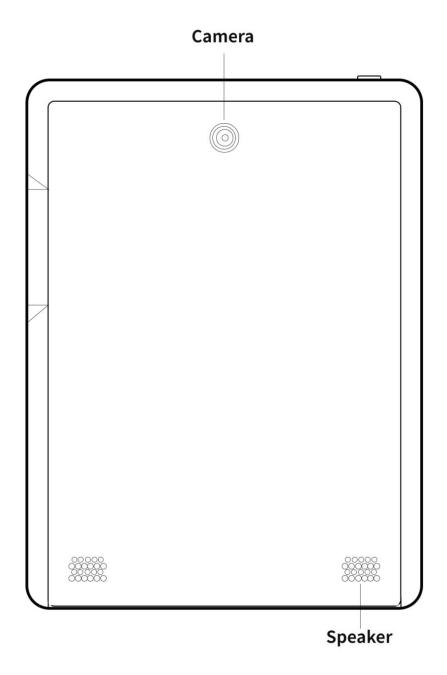

Bottom

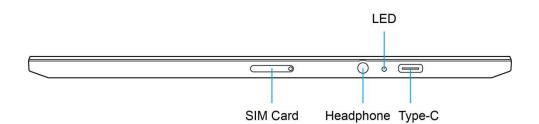


Function introduction of the buttons

Power/ Sleep-Wake up	Press the power button to turn on the device
	Press and hold the power button for 2-3 seconds, and select
	"Power off" in the menu to turn off the device.
	Press the power button and then release it immediately, the device
	goes to the sleep state
	Press the power button and then release it immediately to wake up
	from sleep mode
	After storing the fingerprint, you can quickly unlock the screen and
Fingerprint	do other operations
Camera	Used to take pictures of text and recognize or scan QR codes
Speaker	Used for external sound
LTE	After inserting the SIM card, you can connect to the network
LTE	(device support is required)
Type-C	Connect Kloud Note to PC via Type-C data cable to transfer data,
	or charge the device

2. Home

At the top is the status bar, which displays the current basic status of the device, including: home button, back to the previous step, multi-task switching, refresh, volume adjustment, contrast adjustment, WiFi, connection, battery display, and time indicator.

At the bottom is the function bar, including: Note, Reader, APPs, Settings.

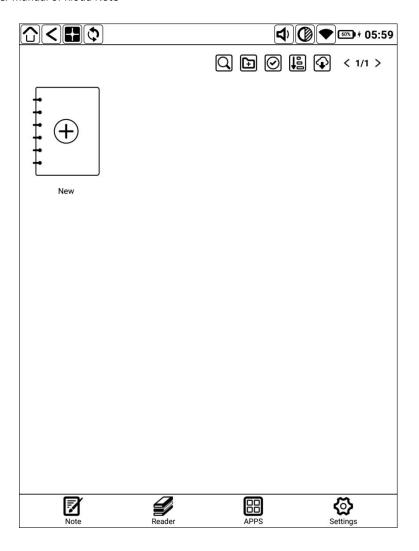

3. Note

Click on the main interface to display the note list and note management menu.

Q Search

Search for notes, keywords support note name, note content, note creation time.

New folder

After creating a new folder, you can move notes to the folder.




Select

In the selection interface, you can select/unselect folders and notes, and move/delete selected items.

↓ Sort


It can be sorted in ascending/descending order of note creation time, note modification time, and note name.

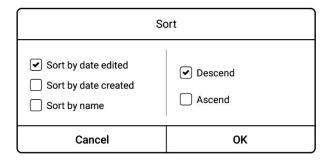

Long press the note, you can choose to lock/unlock, export, rename, move, or delete the note.

Note1
Lock
Export
Rename
Move
Delete

Long press the folder, you can choose to rename, move, or delete the folder.

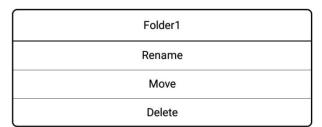







Cloud-sync

(Login account is required) You can synchronize notes to cloud storage. Each time you log in to your account, it will automatically synchronize notes from cloud storage to the device.

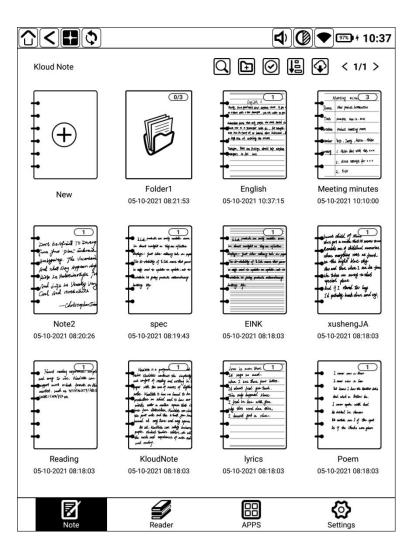


3.1 Handwriting

Click "New" to create a new blank note, and click on any note cover to enter the note handwriting page.

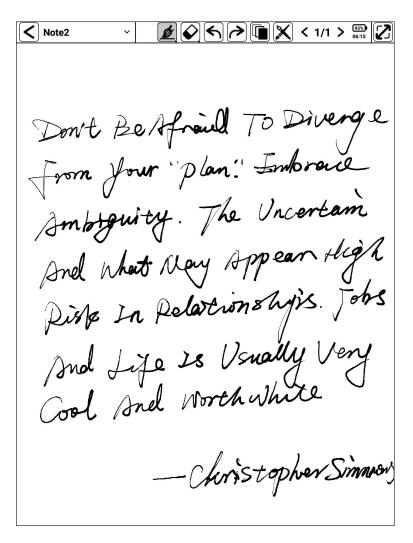


In the drop-down list of note names, you can quickly switch to different notes or create a new one.

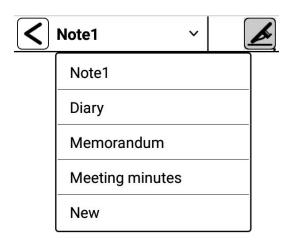




Switch pen type and line width.

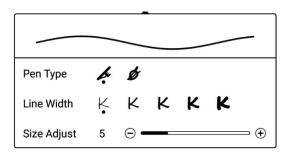



Eraser

Can choose free erasing, area erasing, erasing all, and deleting the current page.

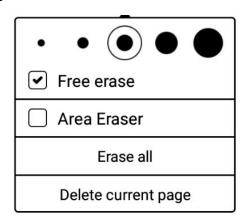






Undo / Redo

Can quickly undo or restore the undone handwriting.



Pages

In the all pages of the note interface, you can select a single page and move the position back and forth, or select multiple pages and export as a pdf document, or delete the selected page.

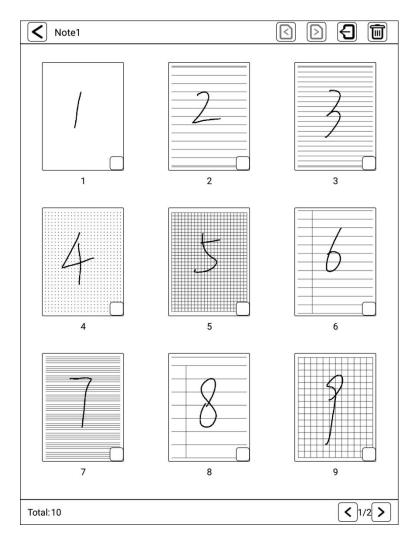

More options


Click to show/hide the menu bar not commonly used on the right.


Previous / Next & Add new page Switch the previous / next page of the note.

When the page is the last page of the current note, click again to create a new page. The type of writing paper is the same as the previous page by default.

You can also slide by hand to turn pages/ add new pages.

Click the page number in the middle of < 25/500 > to quickly jump to the page.

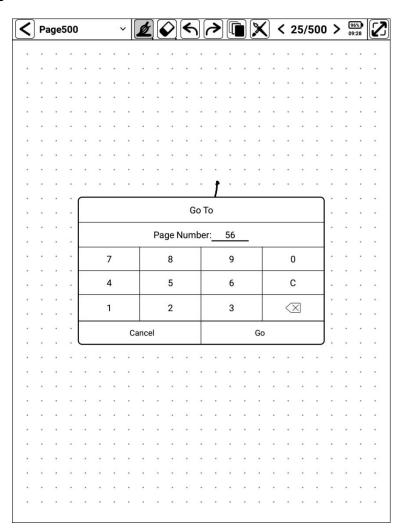

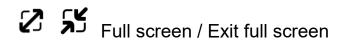

Go to full screen / exit full screen mode.

Type of writing paper

Different type of writing paper can be selected/switched.



Geometric graphics

Click to show/hide the geometric graphics menu, including straight lines, triangles, circles, and quadrilaterals.



You can choose nearby devices that support Miracast (such as PC, TV, etc.) to share the screen and notes of Kloud Note.



Export

The available note export methods are: Export current page in PDF, Export all in PDF, Export current page in PNG.






Disable / Enable touch

Disable/Enable hand touch operation. After disabling hand touch, the device can only be operated with a pen.





Only the line where the stroke is displayed, other written content is invisible, which effectively protects personal privacy.

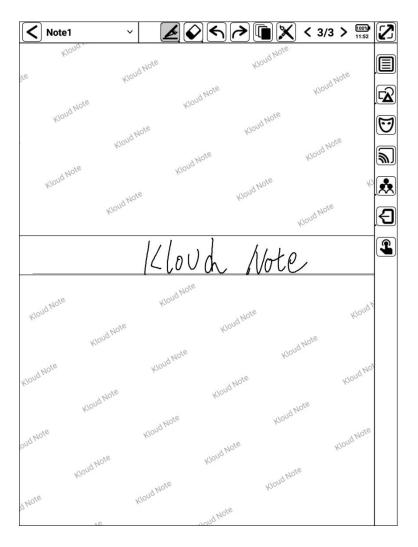

4. Reader

Click on the main interface to display the book list and the book management menu.

Q Search

Local search for books, keywords support book title, author, annotation, and the first two lines of the bookmark page.

Search for books online, keywords support book titles and authors.



New bookshelf

After creating a new bookshelf, you can move other books and documents to the bookshelf.



Select

In the selection interface, you can select/deselect books and bookshelves, and move/delete selected items.



Icon / list switch

Click the icon to switch the icon or list display mode.



Click it to scan all documents in the internal storage and display them in the default bookshelf.

The supported formats are: PDF, TXT, EPUB, MOBI, RTF, FB2, DOC, HTML, etc.





Cloud-sync

(Login account required) You can synchronize books and notes to cloud storage. Each time you log in to your account, it will automatically synchronize books and notes from cloud storage to the device.



WiFi Transfer


When the mobile phone or computer and Kloud Note are connected to the same local area network, you can transfer books and documents from the mobile phone or computer to Kloud Note via wifi, and they will be added to the default bookshelf after successful reception.

Long press the bookshelf, you can choose to rename, move or delete the bookshelf:

Favorite
Rename
Move
Delete

Long press the book, you can choose to lock/unlock, rename, move, delete the book:

The Power of Habit
Lock
Rename
Move
Delete

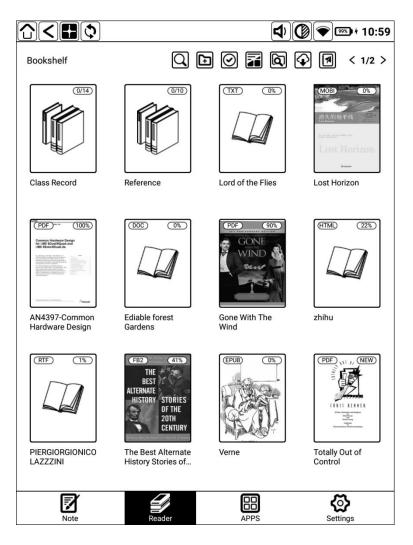

4.1 Reading

Click on the cover of any book to enter the reading interface. The default is to display the reading area in full screen, hide the status bar at the top, and display the reading progress, time and battery power at the bottom.

Chapter 1 - Holding Hands in the Dark

North Korea faded to black in the early 1990s. With the collapse of the Soviet Union, which had propped up its old Communist ally with cheap fuel oil, North Korea's creakily inefficient economy collapsed. Power stations rusted into ruin. The lights went out. Hungry people scaled utility poles to pilfer bits of copper wire to swap for food. When the sun drops low in the sky, the landscape fades to gray and the squat little houses are swallowed up by the night. Entire villages vanish into the dusk. Even in parts of the showcase capital of Pyongyang, you can stroll down the middle of a main street at night without being able to see the buildings on either side.

When outsiders stare into the void that is today's North Korea, they think of remote villages of Africa or Southeast Asia where the civilizing hand of electricity has not yet reached. But North Korea is not an undeveloped country; it is a country that has fallen out of the developed world. You can see the evidence of what once was and what has been lost dangling overhead alongside any major North Korean road—the skeletal wires of the rusted electrical grid that once covered the entire country.

North Koreans beyond middle age remember well when they had more electricity (and for that matter food) than their pro-American

.07%

Tap the left (vertical) area of the screen to switch to the previous page.

Tap the right (vertical) area of the screen to switch to the next page.

Click the middle (vertical) area of the screen to bring up the menu bar.

The top menu includes: return, search, add/cancel bookmark, refresh.

The bottom menu includes: previous chapter, progress adjustment, next chapter, table of contents, format/display, notes, settings.

< Chapter 1 The Sound of the Shell The boy with fair hair lowered himself down the last few feet of rock and began to pick his way toward the lagoon. Though he had taken off his school sweater and trailed it now from one hand, his grey shirt stuck to him and his hair was plastered to his forehead. All round him the long scar smashed into the jungle was a bath of heat. He was clambering heavily among the creepers and broken trunks when a bird, a vision of red and yellow, flashed upwards with a witch-like cry; and this cry was echoed by another. "Hi!" it said. "Wait a minute!" The undergrowth at the side of the scar was shaken and a multitude of raindrops fell pattering. "Wait a minute," the voice said. "I got caught up." The fair boy stopped and jerked his stockings with an automatic gesture that made the jungle seem for a moment like the Home Counties. The voice spoke again."I can't hardly move with all these creeper things." The owner of the voice came backing out of the undergrowth so that twigs scratched on a greasy windbreaker. The naked crooks of his knees were plump, caught and scratched by thorns. He bent down, removed the thorns carefully, and turned around. He was shorter than the fair boy and very fat. He came forward, searching out safe lodgments for his feet, 丰 $[\mathcal{S}]$

Q Search

Search within the current document.

Add / Cancel bookmark

Can add bookmarks. When the bookmarked page is displayed, it will be displayed as an icon for canceling bookmarks, click to cancel bookmark.

Refresh

Refresh the current page completely.



Previous Chapter / Next Chapter

Can quickly switch to the previous or next chapter, or drag the progress bar in the middle to quickly change the progress.



Can quickly go to the Contents interface, which can switch the list pages of Contents, bookmarks, annotations, notes, etc..

A Format

The page format adjustment menu can be called out, which can adjust the font size, line spacing, top/bottom spacing, left/right spacing.






Turn on/off the handwriting note function, the note menu and note content will be displayed when it is turned on, and hidden when it is turned off.

Settings

You can set the automatic page turning time interval of the current document, display chapter names, display current reading progress/system time/battery power, export file storage path, etc...

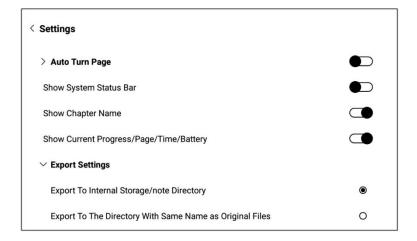


4.2 Contents

4.2.1 Contents

When reading a document, tap the middle of the screen to bring up the menu bar, and tap "Contents" in the lower left corner to switch to the document contents interface.

The top menu bar can be switched to the list interface of Contents, Bookmarks, Labels, Notes.

Click each category to jump to the main text of the page.

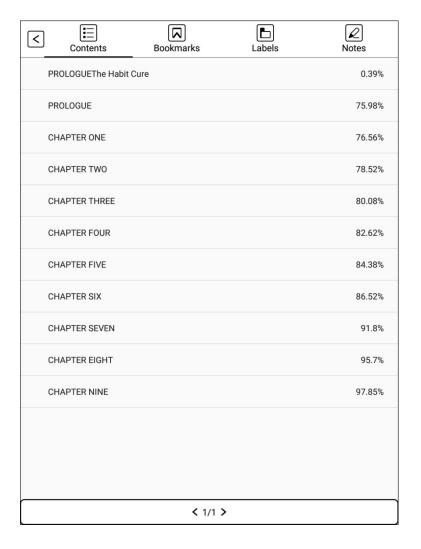


4.2.2 Bookmarks

When reading a document, click in the middle of the screen, and in the pop-up menu bar, click at the top to add a bookmark to the current page. If a bookmark has been added, you can click to cancel.

Bookmarks can be viewed uniformly on the Contents-Bookmarks page, which is convenient for positioning and jumping. Bookmarks can be deleted on this interface.

Click each bookmark to jump directly to the body of the page.

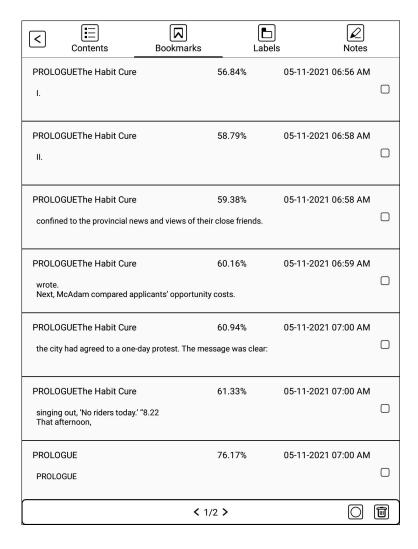

4.2.3 Labels

When reading the document, you can press and hold the text and drag it to pick up the word, and the required text can be highlighted\underlined line\underlined dotted line\underlined wave line to mark the text. By default, the last selected method is used for labeling, and the initial use defaults to underline the line method.




Copy the selected text.



Go to to the browser to search for the selected text.


Search and highlight the same text in the document.

Click the marked text, and then click to delete the mark.

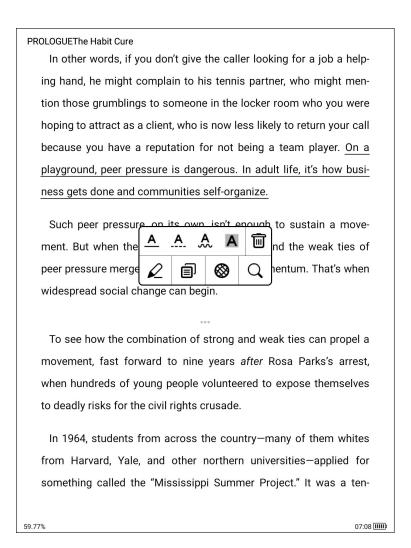

You can also add comments to the marked text by selecting




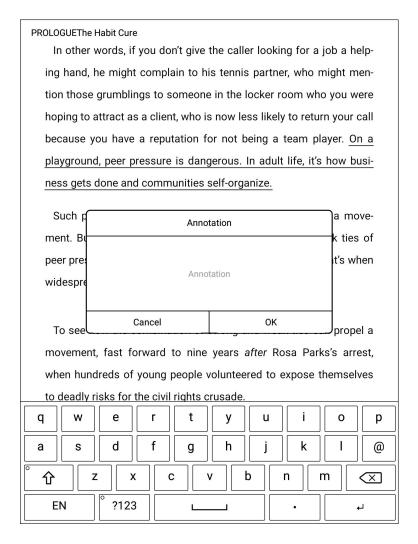

Labels and annotations can be viewed on the Contents-Labels page, which is convenient for positioning and jumping. Labels and annotations can be deleted on this interface.

Click each label to jump directly to the main text of the page.

All contents of the Labels page can be exported as txt files, and the export directory is a folder with the same name as the source document under the /sdcard/Annotations directory.

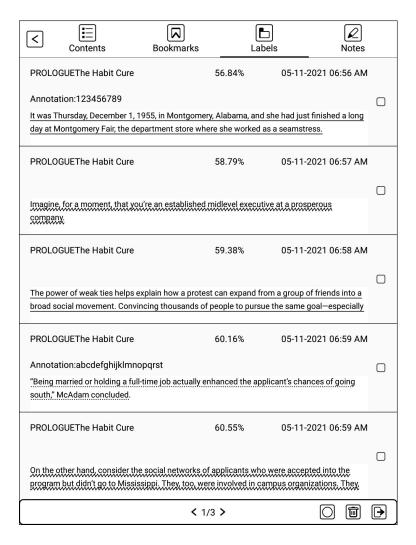

4.2.4 Handwritten Notes

On the Contents-Notes page, you can view all handwritten notes.

Click on each page to jump to the main text of the page.

All the contents of the Notes page can be exported as pdf documents and png images. The export directory is a folder with the same name as the source document under the /sdcard/notes directory.



4.3 Handwritten Note

When reading a document, click in the middle of the screen. In the pop-up menu bar, click to turn on the handwritten note function, and click to turn it off. The note menu and note content will be displayed when it is turned on, and the note menu and note content will be hidden when it is closed.

Unfold/Fold handwritten menu bar.





2 Disable/Enable touch

Disable/Enable hand touch operation.





Previous / Next

Page turning of the document, it is mainly convenient for the pen to click to turn the page when the hand touch is disabled.



Can switch between pencil and brush, and the width of the pen.



Eraser

There are free erasing, area erasing, and erasing options.





← → Undo / Redo

Can quickly undo or restore the undone handwriting.




Export

Can export the current page with handwritten notes, all notes and corresponding text pages as pdf documents, or the current page with handwritten as png images.

the megaphone?" The fair boy shook his head. "This is an island. At least I think it's an island. That's a reef out in the sea. Perhaps there aren't any grownups anywhere." The fat boy looked startled. "There was that pilot. But he wasn't in the passenger cabin, he was up in front." The fair boy was peering at the reef through screwed-up eyes. All them other kids," the fat boy went on. "Some of them must have < got out. They must have, mustn't the he fair boy began to pick his way as casually 🌠 possible toward ➂ and not too obviously uninterested, but the fat boy hurried after him. "Aren't there any grownups at all?" "I don't think so." The fair boy said this solemnly; but then the delight of a realized ambition overcame him. In the middle of the scar he stood on his head and grinned at the eversed fat boy. "No growhups!" The lat boy thought for a moment. 4 That pilot." The fa owed his feet to come down and sat on the boy all **→** steamy earth. "He m dropped us He couldn't land here. No in a place with wheels." "We was attacked!" "He'll be back all right." The fat boy shook his head. "When we was coming down I looked through one of them windows. I saw the other part of the plane. There were flames coming out of it." He looked up and down the scar. "And this is what the cabin done." The fair boy reached out 09:40 🗨


5. Application

Click on the main interface to view the application.

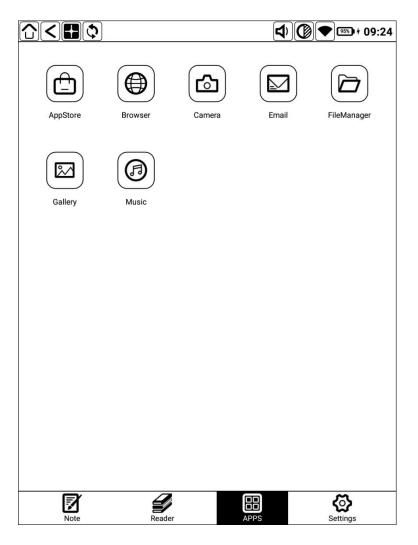

5.1 AppStore

You can download the required third-party apps here.

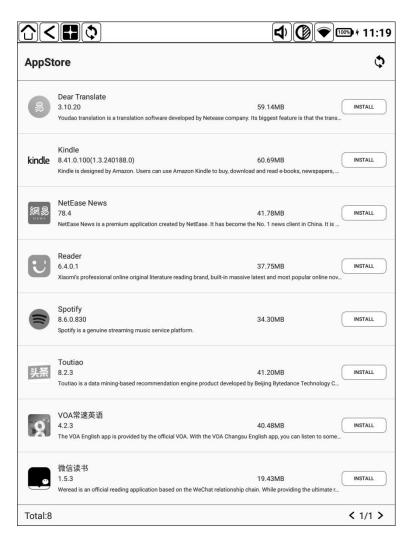

Declaration

- 1. All of the proposed apps in AppStore are collected from Internet, for study reference only. If there is any copyright infringement, please contact support@geniatech.com and we will delete them immediatedly after verification.
- 2. We do not verify the integrity and safety of the provided apps. Please verify the apps after download.
- 3. For further solution of app function problem, Please contact the app developer, except for the aspect of app operation optimization.

4. All of the shared resources are free. Please purchase the official licensed apps if any technical support required.

5. The copyright and the related resources are owned by the legal owners.

5.2 Browser

Enter the URL or keyword in the address input box, and click to access. In the English state, the Google search engine is used by default, and in the Chinese state, the Baidu search engine is used by default.



5.3 FileManager



Search

Input keywords to search.



New folder

After creating a new folder, you can move files to the folder.




Select

In the selection interface, you can select / deselect folders and files, and copy / move / delete the selected items.


↓ Sort


Select ascending/descending order by note creation time, note modification time and note name.

Long press the file to open, rename, delete, copy and move it.

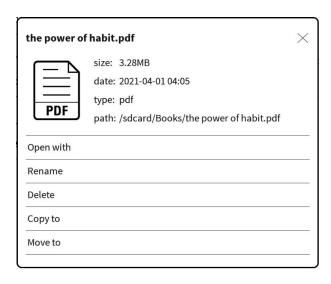


Long press a folder to rename, delete, copy and move it.

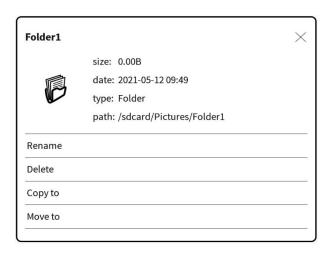

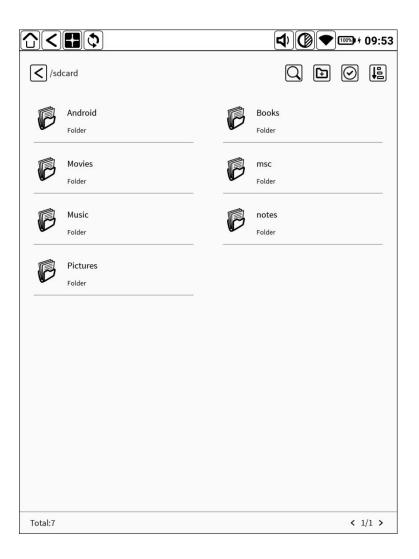

6. Settings

Click on the Home interface to display the main setting interface, where users can set/manage network, account, language, upgrade, Apps, time, power, equipment and more settings.

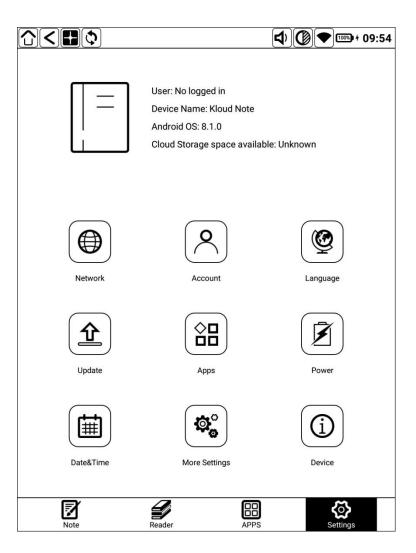


6.1 Network

6.1.1 WiFi

After turning on wifi, the device will automatically search for available WIFI

hotspots, select the hotspot in the displayed WLAN network list, and input the password to connect to WIFI. After the connection is successful, the WIFI connection signal icon will be displayed in the status bar.

After the Wi-Fi hotspot connection is successfully set up for the first time, it will automatically record the information of the hotspot. The next time you connect, just click the Wi-Fi switch in the notification bar to automatically connect.

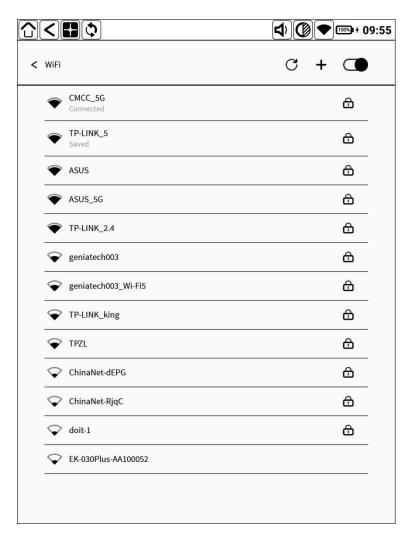


6.1.2 Mobile network

After inserting the 4G SIM card, turn on the mobile network to use the 4G network.


6.2 Account

The logged-in device can enjoy the services of syncing notes & books to the cloud server, and downloading notes & books from the cloud server to the device. Visit https://www.kloudnote.com through the browser on PC or mobile phone, you can log in & view the notes & books in cloud storage.

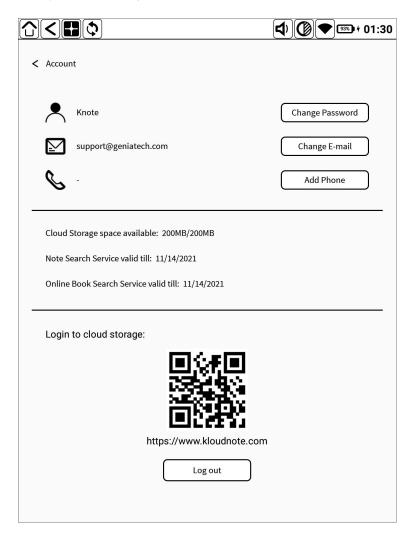


6.2.1 Register

Register via mobile phone number or email address. The registered mobile phone number and email address cannot be registered again.

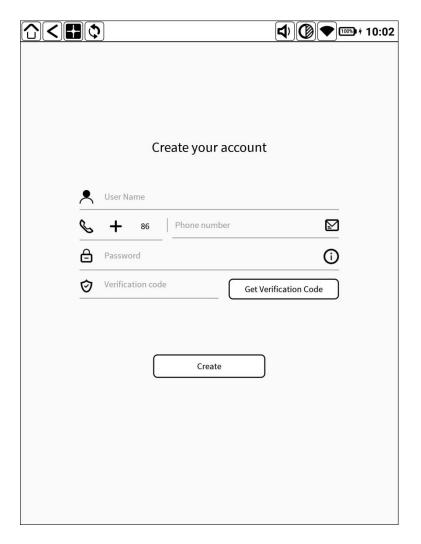

6.2.2 Log in


Enter your mobile phone number or email address with the password to log in.

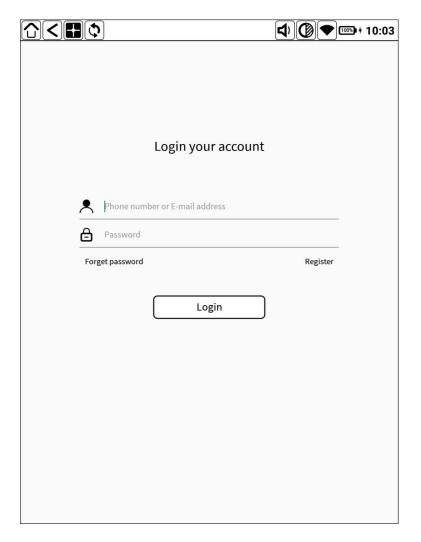

6.2.3 Change Password


You can reset your account password through your mobile phone number or email address + verification code.

If you need to contact us, you can send an email to support@geniatech.com.

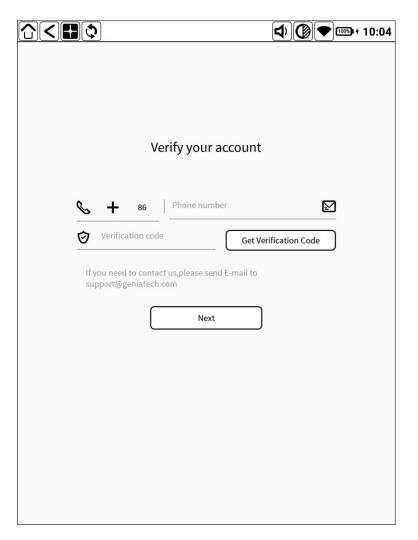

6.3 Languages


You can set the system language and input method here. Currently, the language only supports Chinese and English. More languages will be supported in the future.

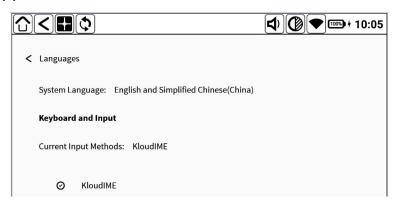

6.4 Update

When there is software on the server to update, click "Detect Update" to pop up a window and display the updated content. Click "Download" to upgrade.


If "Auto detect update" is ON, the message window will be automatically displayed when there is an update.

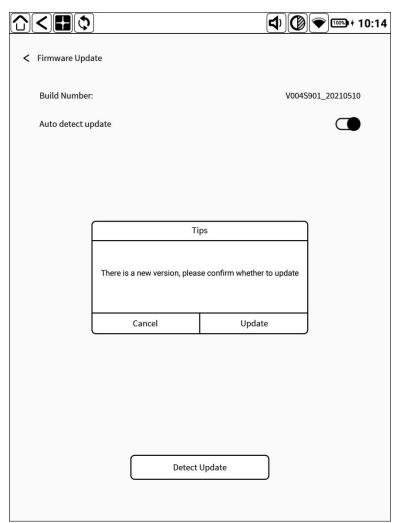

6.5 Apps

You can view all the apps installed on the device.


Click on the APP to view the information of the APP.

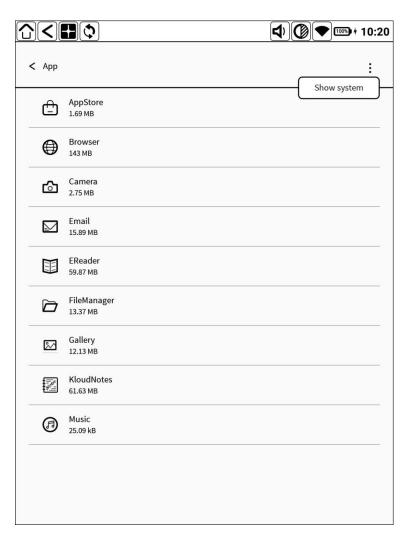




6.6 Power

You can set the automatic sleep time when idle, and view the battery status information.

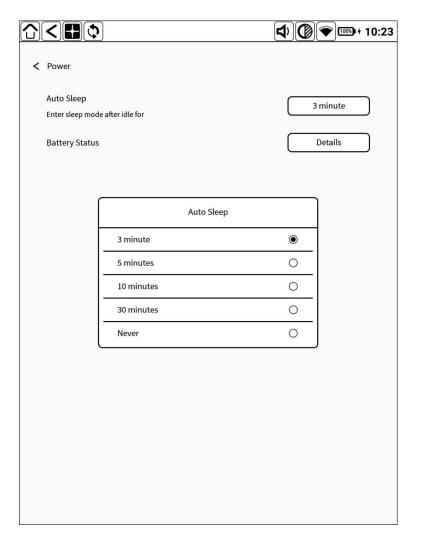

6.7 Data & Time

Choose to update the time automatically or set the time manually. When connected to the Internet, "Automatically detect time" will automatically synchronize the network time; for manual setting, you need to set the date, time zone, and time by yourself.

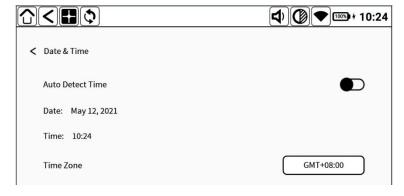

6.8 MoreSettings

Auto sync

Automatic synchronization of notes and books can be turned on/off, and automatic synchronization can be turned on/off under 4G network status.




Password

The password to unlock the screen can be enabled/disabled. 6-digit passwords and fingerprint passwords have been supported. After setting the password, when the device is turned on and standby is activated, you need to enter the password before it can be used;

Please keep the password in mind. If you forget the password, you may not be able to enter the system, please contact us by support@geniatech.com.

The password used to lock notes or books is the same as the password to unlock the screen.

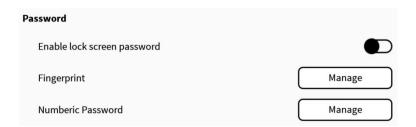


Display

Set the system font display size and contrast.




Sound

Set the size of the system output sound.

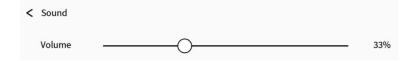


Cast

You can share the device screen to devices that support Miracast, such as TV and PC.

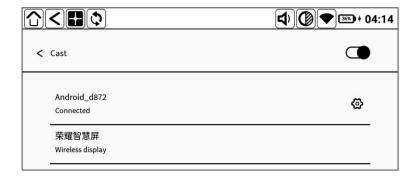

Feedback

If you have any questions or suggestions, please feedback to us. If you need our reply, please fill in your receiving email address.

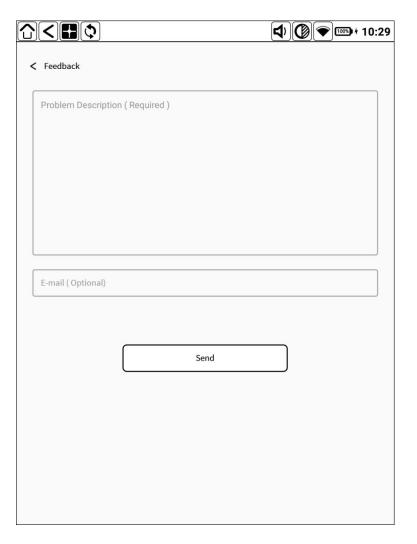

6.9 Device

Device includes hardware, model, Android version, storage, factory reset and other information.

More information includes IP address, WiFi/Bluetooth Mac address, serial number, internal version, system version, privacy policy.



7. Product specification

CPU	Quad-core Cortex-A35	Screen	E-ink screen
RAM	2GB	Screen size	10.3 inch
Flash	32GB	Resolution	1404x1872
os	Android 8.1	Touch type	Electromagnetic touch + Capacitive touch
Language	English/Chinese (Will support more in the future)	Battery	4000 mAh lithium battery
Document format	PDF, TXT, EPUB, MOBI, RTF, FB2, DOC, HTML	USB	Type-C
Update	Support OTA upgrade	WiFi	2.4G/5G

Size	250*175*7.6mm	Fingerprint	Support
Weight	435g	Camera	5 million pixels
Certification	CE、FCC	Audio	Haadaat Misraphana
		Interface	Headset, Microphone
Operating	0°C- 50°C	charging	DC 5V/2A
temperature			

8. Accessories

The package contains the following standard accessories.

- 1. Kloud Note device x1
- 2. Electromagnetic pen x1
- 3. Type-C usb cable x1

9. Safety guide

Please read the following safety instructions before use. If you encounter any technical difficulties, please contact us (send an email to support@geniatech.com) for help.

Screen protector

The display of this device is an E-ink screen, which is a fragile and fragile part. Please do not directly hit/squeeze/press the screen, or fall from a height on a hard surface. If the display screen is cracked, please stop using it and contact the official or other qualified professionals to replace it. Please do not disassemble and replace it yourself.

Qualified accessories

Only batteries, chargers and other accessories that meet the safety standards of this device are allowed to be used.

For details, please refer to the product configuration parameters. If you use incompatible accessories, you must bear the responsibility for any damage to the device.

Stay away from liquids

This device is not waterproof, please do not expose the device to a humid environment, and do not use the product in the rain, and stay away from any corrosive liquids.

Do not disassemble

The battery of this device cannot be replaced, please do not disassemble it yourself to avoid damage to the structure or screen.

Use environment

The allowable temperature range of this device is 0°C-50°C.

10. Warranty terms

10.1 Warranty scope

10.1.1 The body of Kloud Note: The warranty period is 1 year.

- **10.1.2** Within 15 days from the date of purchase, under normal operating conditions, if there is a performance failure caused by the quality of the product itself, if it has not been disassembled and repaired, the product of the same model or repair service can be replaced.
- **10.1.3** Within one year from the date of purchase, any performance failure caused by the quality of the product itself under normal operating conditions, if it has not been disassembled and repaired, can enjoy free maintenance services.
- **10.1.4** Within three years from the date of purchase, if the product has a performance failure, you can enjoy a fee-based maintenance service.
- **10.1.5** The above warranty or repair is limited to failures of electrical components, mainly including hardware motherboards and display screens, excluding consumables and accessories such as shells, packaging, and USB cables.

10.2 Non-warranty coverage

The following conditions are not covered by the warranty. Even within the applicable time frame, the warranty terms will no longer apply, but you can still enjoy fee-based repair services.

10.2.1 Failure machines without Kloud Note trademark.

10.2.2 The malfunctioning machine caused by unauthorized disassembly and maintenance without our permission.

- **10.2.3** Malfunctioning machines with altered or missing product serial numbers.
- **10.2.4** Failure or damage to the malfunctioning machine caused by man-made reasons or use in an unspecified environment, such as excessive humidity or dryness, high temperature, unstable voltage or current, excessive zero-to-ground voltage, etc..
- **10.2.5** Damage caused by accidental reasons or improper use, including machine ingress, rupture, collision, abnormal insertion and removal, insect damage, etc.; Natural consumption, including natural consumption, wear and aging of the casing and plug-in parts.
- **10.2.6** Damage caused by force majeure, such as fire, flood, earthquake and other natural disasters.
- **10.2.7** The malfunctioning machine caused by the operation of the software of the machine outside the allowable scope of the SDK.
- **10.2.8** It has been identified that it does not belong to the malfunctioning machine produced by our company.

10.3 Precautions for repairing

10.3.1 The user needs to contact our after-sales department in advance to determine whether it is within the warranty scope, whether it is a malfunction, the cause of the malfunction, etc..

10.3.2 The user needs to provide the purchase voucher (invoice or receipt), description of the abnormal condition of the equipment, and send it back to our maintenance department together with the equipment.

- **10.3.3** Due to the special nature of the product screen, non-screen repair equipment, please ensure that the screen is in good condition and reinforce the packaging before sending it for repair to avoid damage on the way. Our company is not responsible for the free repair of products with damaged screens.
- **10.3.4** Only the machine and the above-mentioned required items are provided for repair. Do not send earphones, adapters and other accessories with the equipment. If there is any loss, our company will not be liable for compensation.
- **10.3.5** Please back up your data before sending it for repair. Our company is not responsible for data loss due to repair.

The final interpretation right of this warranty clause belongs to Shenzhen Geniatech Inc., LTD.

11. Q & A

11.1 How to turn on and off

 When it is turned off, press and hold the power button for 2-3 seconds to turn it on.

When the power is on, press and hold the power button for 2-3 seconds,
 and select "Power off" in the pop-up menu.

- When the power is on, press and hold the power button for 5 seconds to power off.
- When the power is off, connect the TypeC cable to charge, and it will automatically power on.

11.2 How to charge

- Connect the device to the computer via a USB data cable for charging.
- Connect the USB cable and the device through the adapter (optional), and connect to the AC outlet for charging.
- Charging time is about 3 hours.

Note:

If the charging status is not displayed when the adapter is connected, please check whether the default power supply of the adapter is 5V (voltage range: 4.5V-5.4V). If it is not within this range, please replace the adapter and try again.

11.3 How to transfer data

- Connect a mobile phone or computer via a data cable for data transmission.
- Connect to WIFI and log in, then download the book in Reader.

 Through WIFI wireless transmission, transfer books from mobile phones or computers to devices.

 After connecting to WIFI, visit the webpage in the built-in browser to download data.

11.4 How to upgrade the system

Online upgrade via OTA.

After WIFI is connected to the Internet, in Settings-->Update-->Detect Update, search for the upgrade package and upgrade the device online.

11.5 How to synchronize notes and books to cloud storage

First, you need to register a Kloud Note account, and then the login number.

In Settings-->More Settings-->Auto sync, check whether automatic

synchronization is turned on. After opening, it will automatically synchronize

notes and books to cloud storage. Every time you log in, you will automatically

synchronize your notes and books from the cloud storage to the device.

11.6 How to protect the equipment

Use hard-shell book covers as much as possible for daily use to avoid direct impact and squeeze on the screen.

When not in use, try to buckle the screen down and place it on a horizontal surface, and do not put hard objects between the screen and the horizontal surface.

Avoid accumulating heavy objects on top of the Device and keep away from all kinds of liquids.

12. Statement

Shenzhen Geniatech Inc., LTD reserves the right to make changes to the product specifications and content contained in the "User Manual", subject to change without notice.

You can get product-related information through our website: www.geniatech.com