

Android Board ENJOY TV QUAD CORE BOARD Dragon Board3 User's Guide



Thank you for purchasing this Geniatech product.

.Before using it, be sure to read the precautions contained in this User's Guide.

.Keep the User's Guide in a safe place for future reference.

.For the most up-to-date information about this product, visit official website at http://www.geniatech.com

Contents

- 1. Safety Information, P3-4
 - 1.1 Warning, *P3*
 - 1.2 Precautions, P3
 - 1.3 Handling Cautions, P4
- 2. Introduction, *P5-9*
 - 2.1 Package Contents, P5
 - 2.2 Product Features, *P5*
 - 2.3 Board Placement, P6-8
 - 2.4 Remote Controller, P8
 - 2.5 Setup Connection, P9
 - 2.6 Display when Power Up, P9
- 3. Settings, *P10-20*
 - 3.1 WiFi, P10
 - 3.2 Bluetooth, P11
 - 3.3 Ethernet, *P12*
 - 3.3 Date Usage, P12
 - 3.5 More..., *P13*
 - 3.6 Sound, *P14*
 - 3.7 Display, *P14*
 - 3.8 Storage, *P15*
 - 3.9 Apps, *P15*
 - 3.10 Permissions, P16
 - 3.11 Location, *P16*
 - 3.12 Security, *P17*
 - 3.13 Language & input, P17
 - 3.14 Backup & reset, *P18*
 - 3.15 Add an account, P18
 - 3.16 Accessibility, P19
 - 3.17 Developer options, P19
 - 3.18 About device, P20
- 4. Apps Install & Uninstall, P21
- 5. Firmware Update, P22
- 6. Trouble Shooting/FAQ, P23
- 7. Repairs, P24
- 8. Specification, *P25*
- 9. Trademark Notice, P26

1. Safety Information

Read and understand all instructions before using this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

1.1 Warning

To reduce the risk of electric shock, DO NOT remove the cover (or back).

DO NOT attempt to repair the product, this could lead to the risk of injury, damage to the product .

To reduce the risk of fire or electric shock, keep this product away from exposed direct sunlight, naked flames or heat, large amounts of moisture, dust, and sand.

FCC Note (for U.S.A)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

The user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- This class B digital product meets all requirements of the Canadian Interference Causing Equipment Regulations.

1.2 Precautions

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below.

Keep these operating instructions handy for future reference.

- 1.2.1 Read these instructions.
- 1.2.2 Keep these instructions.
- 1.2.3 Heed all warnings.
- 1.2.4 Follow all instructions.
- 1.2.5 DO NOT use this apparatus near water.
- 1.2.6 DO NOT clean with any chemical detergent. Clean only with a dry cloth.
- 1.2.7 DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 1.2.8 DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- 1.2.9 Protect the power cord from being walked on or pinched particularly at plugs,

convenience receptacles, and the point where it exits the apparatus.

- 1.2.10 Only use attachments/accessories specified by the manufacturer.
- 1.2.11 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 1.2.12 Unplug this apparatus during lightning storms or when unused for long period of time.
- 1.2.13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

1.3 Handling Cautions

- 1.3.1 DO NOT expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- 1.3.2 To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.
- 1.3.3 DO NOT plug multiple electric devices into the same wall socket. Overloading a socket can cause it to overheat, resulting in a fire.
- 1.3.4 Before connecting other components to this player, be sure to turn them off.
- 1.3.5 If the product makes an abnormal noise or produces a burning smell or smoke, turn off the power switch immediately and disconnect the power plug from the wall outlet. Then, contact the nearest customer service center for technical assistance. Do not use the product. Using the product as it is may cause a fire or an electric shock.

2. Introduction

2.1 Package Contents

Enjoy TV Quad Core Board - Dragon Board3

User's Guide

HDMI Cable

IR Remote Controller (IR RC)

Optional Remote Controller

2.4G wireless Remote Controller

USB wire/wireless Mouse & Keyboard


Power Adapter, Input: AC100 ~ 240V, 50/60Hz, Output: 12V, 2A

2.2 Product Features


- Quad Core CPU, Octa GPU, frequency is 1.6-2.0GHz, RAM is 2G, built in 8G emmc flash memory. Powered by Android 4.4.2 OS
- Built in browser and support virtual private network access
- RJ45 10/100M Ethernet interface
- Support 4k2k video local media playback from SD card or USB HDD
- Built in 802.11b/g/n WIFI module with antenna inside, WiFi frequency range is 2400-2497GHz
- Rj45:Wired internet connection
- HDMI and CVBS video output, HDMI video input
- connect to HDTV for HD video playback
- 2 external USB interface, support mobile HDD, support mouse and keyboard operating
- Support weather, calendar, and desktop clock gadgets
- Support USB mouse and keyboard operation
- Support simple IR remote control with mouse function
- Support music player, picture player and more family entertainment
- Support Micro SD card
- Support Google Chrome Browser
- App Installer for application installation from USB/SD card
- And More

2.3 Board Placement

Front side

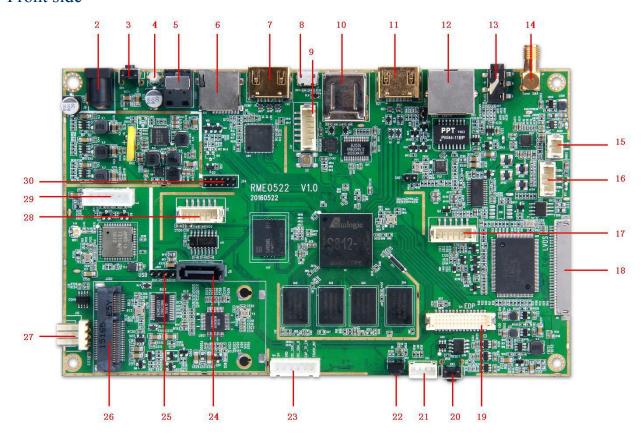


Back side

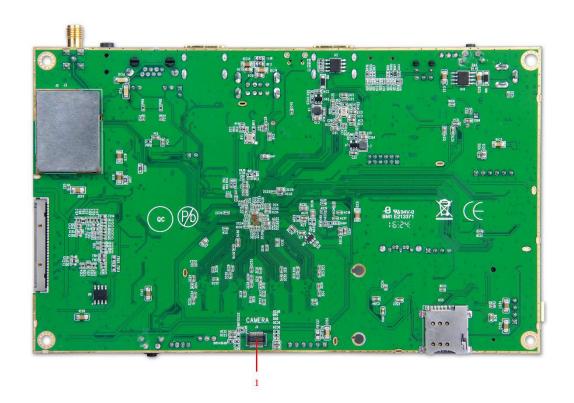

Item	PART NUMBER	DESCRIPTION
1	CAMERA INTERNAL	CAMERA CONNECTOR
2	POWER JACK	POWER JACK
3	POWER SWITCH	POWER SWITCH
4	LED	POWER LED
5	SPDIF	DIGITAL AUDIO
6	MICRO SD	MICRO SD CARD CARRIER
7	HDMI	HDMI INPUT
8	USB OTG	MICRO USB OTG
9	UART	RS232
10	USB	DUAL USB HEADER
11	HDMI	HDMI OUTPUT
12	RJ45	ETHERNET
13	AUDIO	AUDIO EXTERNAL
14	SMA	TV TUNER COAXIAL CONNECTOR
15	MICROPHONE	INTERNAL MICROPHONE HEADER
16	SPEAKERS	INTERNAL SPEAKER OUTPUT
17	LVDS	SCREEN CONNECTOR
18	LVDS CONTROL	LVDS CONTROL CONNECTOR
19	EDP	EMBEDDEN DISPLAY PORT
20	RESET	RESET SWITCH

21	DEBUG SERIAL PORT	DEBUG SERIAL PORT
22	IR	IR
23	12C	I2C CONNECTOR
24	SATA	SATA INTERFACE
25	USB	USB 4 PINS
26	MINI PCI-E	MINI PCI-E 3G MODULE SLOT
27	SATA POWER	SATA POWER
28	SERIAL PORT	SERIAL PORT
29	BACK LIGHT	BACK LIGHT DRIVER CONNECTOR
30		

2.4 Remote Controller

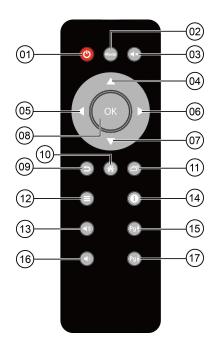

- ① Power
- 2 Mode
- 3 Mute
- **4** Upwards
- **5** Towards the left
- **6** Towards the right
- **7** Downwards
- **® OK**
- 9 Return

- 10 Home
- 1 Background App
- 12 Menu
- (13) Vol+
- **1** Notification
- **(15)** Page Up
- 16 Vol-
- **1** Page Down

Note: Button Battery 2025 3V insert with correct polarity (+/-).

2.5 Setup Connection

Place Dragon Board3 on a flat platform near the TV, and make sure nothing block the remote control signal.

2.6 Display when Power Up

2.6.1 After power up, the TV will first show a Enjoy TV screen during loading. When loading is finished, it will go to Home screen.





2.6.2 Home Screen display.



3. Settings


Using Navigation (4 directions), OK, EXIT, and Menu keys of Remote Controller to select the options, the option selected will be highlighted and confirmed by pressing OK key. Same operation for text input if needed.

Select icon then press OK key. Select icon and select More Settings icon to settings interface.




3.1 WiFi

- 3.1.1 It will automatically scan ambient WiFi networks when select "ON".
- 3.1.2 Connect an available WiFi network. If connect a secured WiFi network, corresponding password will be input firstly. Or fail to connect and need reset password.
- 3.1.3 Once build up the connection with a certain WiFi network successfully, Dragon Board3 will connect this WiFi network automatically when restart. Note: If factory reset, the password of WiFi network have to be reset.

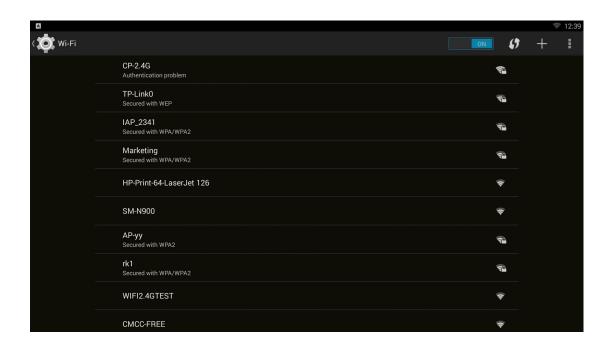


3.2 Bluetooth

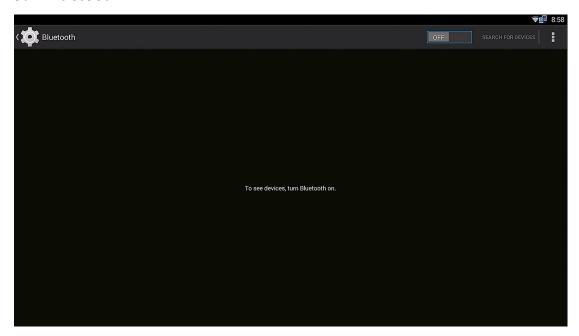

3.3 Ethernet


Connect board and Router by RJ45 network cable.

Press "ON" in Ethernet setting, it will connect to network automatically.

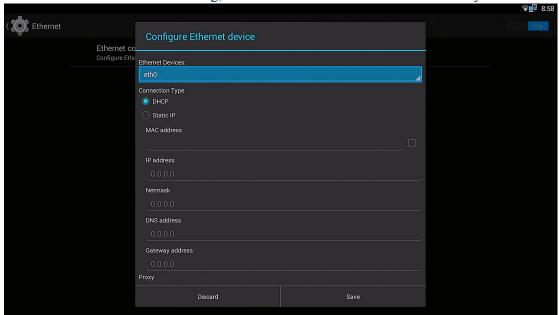


3.4 Date usage

Show data usage information.

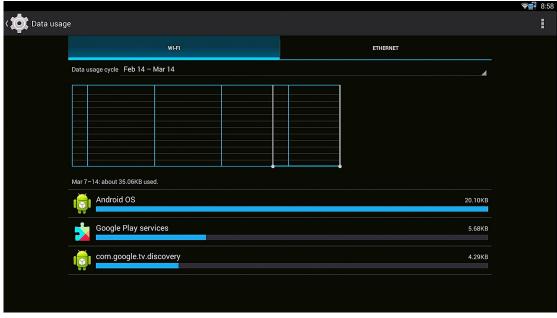

3.5 More...

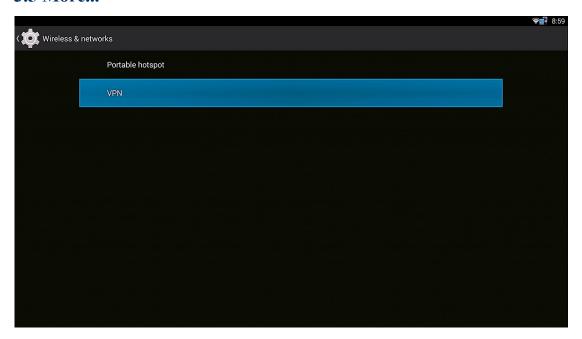

3.5.1 VPN

Build and set VPN

- 3.5.2 Portable hotspot
- 3.5.2.1 Enable Portable hotspot



Note: WiFi and hotspot connection can not be applied at same time. Disconnect WiFi and connect Ethernet while using hotspot function.


3.6 Sound

3.6.1 Volumes

Increase or decrease sound volumes

3.6.2 Touch Sounds

If enable Touch sound, sound will be heard while move remote controller.

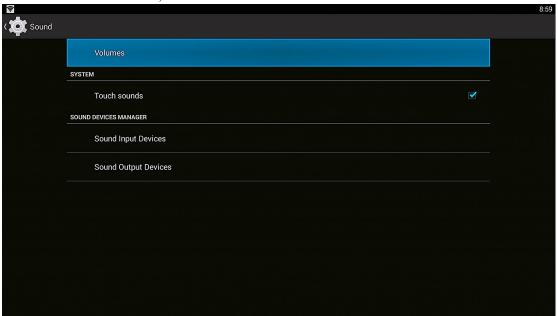


3.7 Display

3.7.1 Auto Brightness

Auto set brightness to save power

3.7.2 Font size

Change the font size of OSD

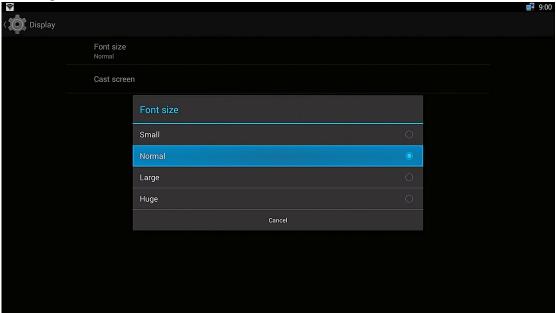

3.8 Storage

Shows the storage used of the OS and SD card.




3.9 Apps

List all apps installed.



You can choose an application and force to shut down the app, uninstall the app, clear user data, move to SD card and clear cache data.


3.10 Permissions

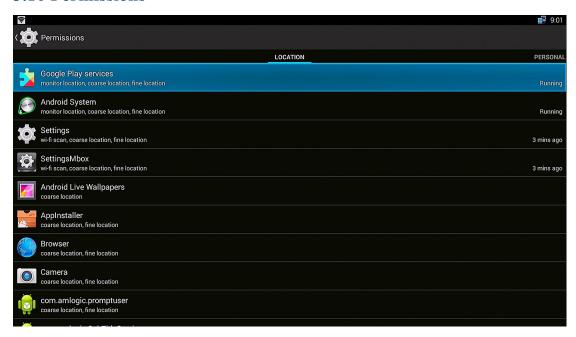


3.11 Location



3.12 Security

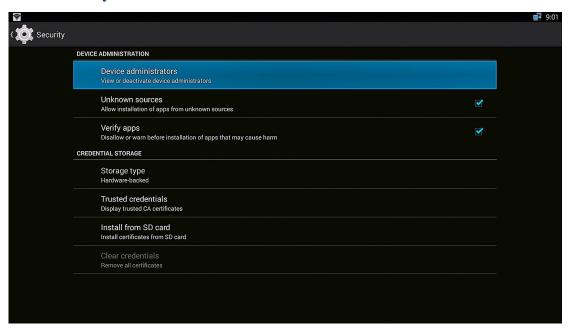

3.13 Language & input

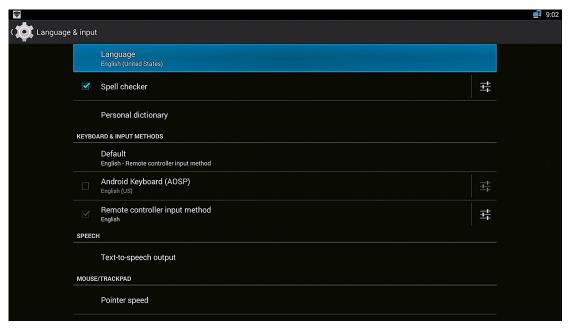


Change OSD language and input method.

The default input method is android standard keyboard.

If you are using our IR remote control, enter into "Default" option and switch to remote controller input method.

3.14 Reset

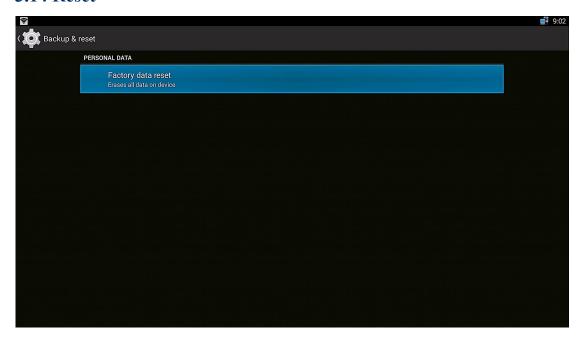

Back up my data:


You can backup your application data, WiFi password and other settings.

Factory data rest:

You can reset all the settings and apps to factory default.


Note: You might want to backup important data before resetting the board. Once you choose to rest to factory default, all data/apps will be deleted.

3.15 Add an account

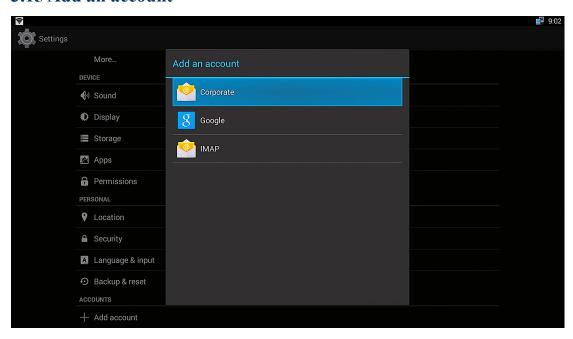


3.16


Date&Time

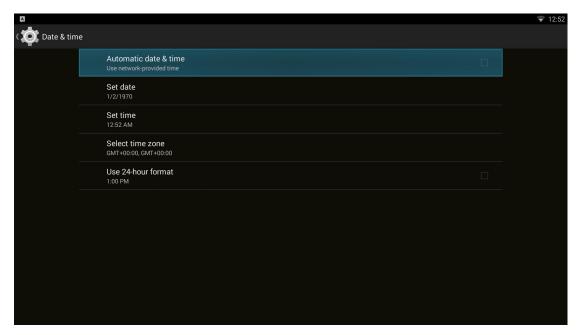

3.17 Developer options.

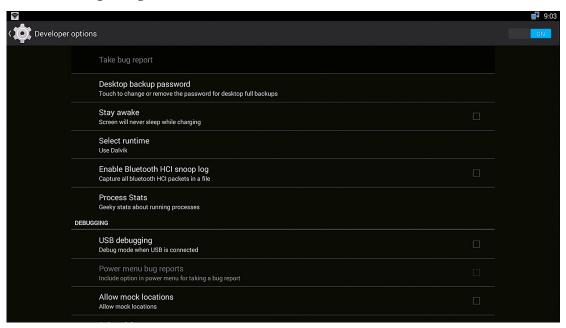

3.18 About device.

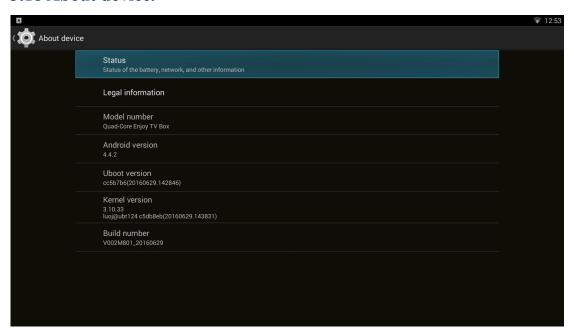

4. Apps Install & Uninstall

On Dragon Board3, you can install apps from Android Market over the Internet or other sources, such as other online sources, the internal storage and the USB storage device and SD card that you have mounted onto Dragon Board3.

You also can manage apps on Dragon Board3 and SD card, install/uninstall apps, stop running apps, or select other options.

5. Firmware Update

You can download newest firmware from Geniatech Official website: www.geniatech.com

6. Trouble Shooting/FAQ

6.1 No Picture

Refer to the TV user manual for how to select the correct video input channel.

6.2 USB Content cannot be read

- . The format of USB storage device is not supported
- . The supported memory size is 32G maximum.
- . Make sure that this player supports these files.

6.3 Remote Controller cannot respond quickly to the pressing of keys

Make sure that batteries have enough power.

6.4 The firmware updating is not complete after a long time

If you update the firmware over the online service, it may take a long time to download the firmware update files from the server. To save your time, update the firmware through the SD card.

7. Repairs

If you contact us to repair your player, an administration fee may be charged if either:

An engineer is called out to your home at your request and there is no defect in the product.

You bring the unit to a repair center and there is no defect in the product.

We will provide you with the amount of the administration fee before we make a home visit or begin any work on your player.

We recommend you read this manual throughly, search for a solution on line at www.geniatech.com, or contact Geniatech Customer Care before seeking to repair your player.

8. Specification

CPU Quad core ARM CORTEX A9 2GHz,3D engine

GPU Mali 450MP2 @600MHz

RAM 2G DDR3

ROM 8G

OS Android 4.4.2OS

Optional DOLBY

USB USB2.0 x2
SATA Port SATA x1
HDMI V1.4a
DC Input 12.0V-2A
SD Slot Max: 32G
Video Output HDMI/CVBS

Video Input HDMI

Audio Output HDMI/RCA/Optical

IR receiver

LAN RJ45 10/100M Ethernet interface

WiFi IEEE 802.11 B/G/N Dual Band 2.4G (5.8G Optional)

Audio Decoder Low power MediaCPU with DSP audio processing

Supports MP3,AAC,WMA,RM,FLAC,Ogg and programmable with 5.1

down-mixing

Video/Picture H.265 HEVC MP@L5.0 up to 4K X 2K@30fps Decoder H.264 AVC HP@L5.1 up to 4K X 2K@30fps

> H.264 MVC up to 1080P@60fps MPEG-1 MP/HL up to 1080P@60fps MPEG-2 MP/HL up to 1080P@60fps MPEG-4 ASP@L5 up to 1080P@60fps WMV/VC-1 SP/MP/AP up to 1080P@60fps

RealVideo 8/9/10 up to 1080P@60fps

Multiple language and multiple format sub-title video support

MJPEG and JPEG unlimited pixel resolution decoding

Supports JPEG thumbnail, scaling, rotation and transition effects

Supports .mkv/.wmv/.mpg/.mpeg/.dat/.avi/.mov/.iso/.mp4/.rm/.jpg files formats

Size 182X 110 X 18mm

Net Weight 125g

9. Trademark Notice



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in United States and other countries.