




RK3399 Development Board DB-PX30 User's Guide

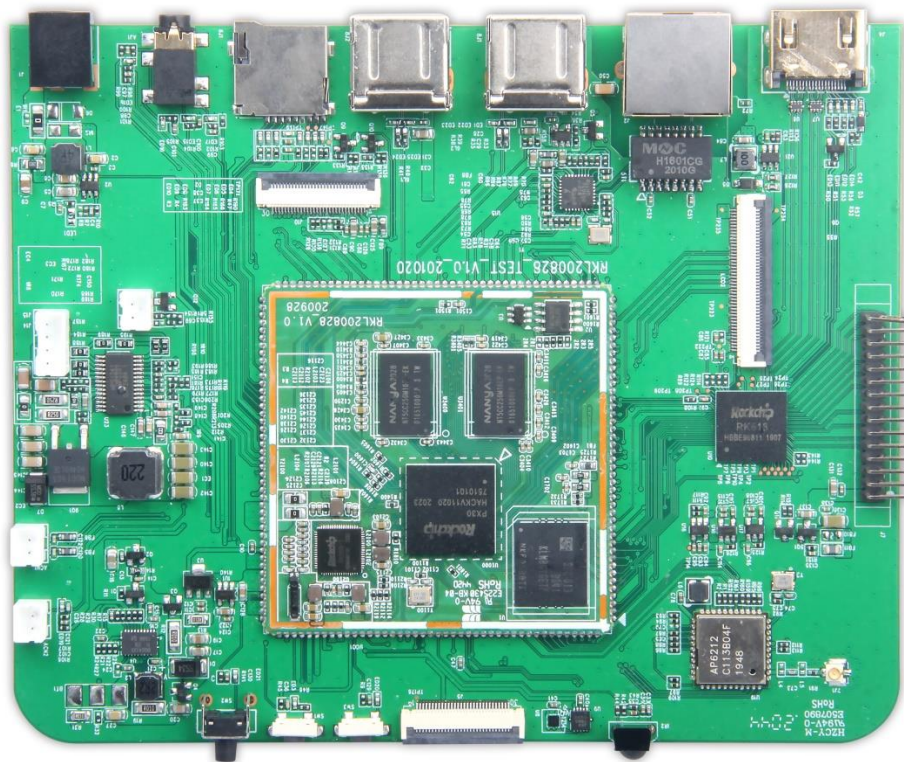

Thank you for purchasing this Geniatech product.
.Before using it, be sure to read the precautions contained in this User's Guide.
.Keep the User's Guide in a safe place for future reference.
.For the most up-to-date information about this product, visit official website at <http://www.geniatech.com>

Contents

1. Safety Information, *P4-5*

- 1.1 Warning, *P4*
- 1.2 Precautions, *P4-5*
- 1.3 Handling Cautions, *P5*

2. Introduction, *P6-8*

- 2.1 Package Contents, *P6*
- 2.2 Product Features, *P6*
- 2.3 Panel Introduction, *P7*
- 2.4 Interface definition, *P7*
- 2.5 Display when Power Up, *P8*

3. Settings, *P9-24*

- 3.1 WiFi, *P9*
- 3.2 Bluetooth, *P10*
- 3.3 Ethernet, *P11*
- 3.4 Data Saver, *P11*
- 3.5 Networks & internet , *P12*
- 3.6 Multiple users, *P12*
- 3.7 Sound, *P13*
- 3.8 Display, *P13*
- 3.9 Storage, *P15*
- 3.10 Apps¬ifications, *P16*
- 3.11 Google services, *P16*
- 3.12 Notification, *P17*
- 3.13 Location, *P17*
- 3.14 Security, *P18*
- 3.15 Languages & input, *P18*
- 3.16 Reset options, *P19*
- 3.17 Sleep, *P19*
- 3.18 Add an account, *P20*
- 3.19 Date & Time, *P20*
- 3.20 Choose wallpaper from, *P21*
- 3.21 Screen saver, *P21*
- 3.22 About device, *P22*
- 3.23 Camera settings, *P22*
- 3.24 HDMI, *P23*

4. Apps Install & Uninstall, *P23*

-
5. Firmware Update, *P23*
 6. Trouble Shooting/FAQ, *P23-24*
 7. Repairs, *P24*
 8. Specification, *P24-25*
 9. Trademark Notice, *P25*

1. Safety Information

Read and understand all instructions before using this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

1.1 Warning

To reduce the risk of electric shock, DO NOT remove the cover (or back).

DO NOT attempt to repair the product, this could lead to the risk of injury, damage to the product .

To reduce the risk of fire or electric shock, keep this product away from exposed direct sunlight, naked flames or heat, large amounts of moisture, dust, and sand.

FCC Note (for U.S.A)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

The user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- This class B digital product meets all requirements of the Canadian Interference - Causing Equipment Regulations.

1.2 Precautions

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below.

Keep these operating instructions handy for future reference.

1.2.1 Read these instructions.

1.2.2 Keep these instructions.

1.2.3 Heed all warnings.

1.2.4 Follow all instructions.

1.2.5 DO NOT use this apparatus near water.

1.2.6 DO NOT clean with any chemical detergent. Clean only with a dry cloth.

1.2.7 DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.

1.2.8 DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

1.2.9 Protect the power cord from being walked on or pinched particularly at plugs,

convenience receptacles, and the point where it exits the apparatus.

1.2.10 Only use attachments/accessories specified by the manufacturer.

1.2.11 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

1.2.12 Unplug this apparatus during lightning storms or when unused for long period of time.

1.2.13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

1.3 Handling Cautions

1.3.1 DO NOT expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.

1.3.2 To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

1.3.3 DO NOT plug multiple electric devices into the same wall socket. Overloading a socket can cause it to overheat, resulting in a fire.

1.3.4 Before connecting other components to this player, be sure to turn them off.

1.3.5 If the product makes an abnormal noise or produces a burning smell or smoke, turn off the power switch immediately and disconnect the power plug from the wall outlet. Then, contact the nearest customer service center for technical assistance. Do not use the product. Using the product as it is may cause a fire or an electric shock.

2. Introduction

2.1 Package Contents

Development board DB-PX30

User's Guide

HDMI Cable

Optional Remote Controller

2.4G wireless Remote Controller


USB wire/wireless Mouse & Keyboard

Power Adapter, Input: AC100 ~ 240V, 50/60Hz, Output:12.0V-2A

2.2 Product Features

- Rockchip PX30 with Quad-core Cortex-A35 and dual-core Mali-G31 GPU
- 2GB RAM memory(Optional 4G) ,
- 16GB eMMC flash(Optional 8-32G)
- Android OS 10.0
- Build-In Wifi, 2.4G/5G, 10/100M Ethernet
- Interface: USB2.0*2, HDMI Out, TF Card slot, RJ45
- SDK available, fully control displaying
- Support 2.4G &5G wireless Router
- Support 2.4G wireless motion Remote Controller
- App Installer for application installation from USB

2.3 Panel Introduction

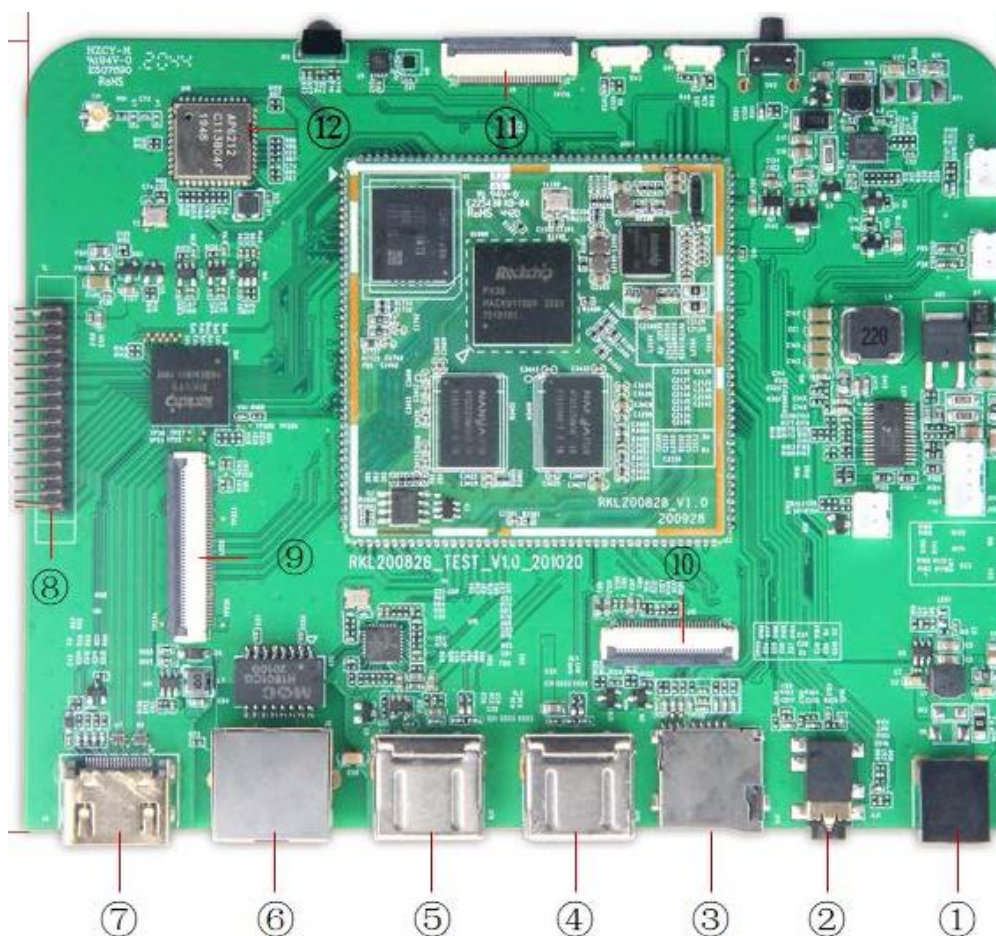

2.4 Interface definition


No.	Name	Description
1	DC IN	Power input: 12V/2A
2	3.5mm Jack	Headphone
3	MicroSD Card Slot	Up to 128GB
4	USB	USB 2.0 HOST
5	USB	USB 2.0 HOST
6	RJ45	10/100M Ethernet
7	HDMI OUT	Up to HDMI 2.0a
8	LVDS	Up to 1920*1080
9	MIPI DSI	4Lane
10	MIPI CSI	4Lane
11	TP COB for GL680	*1
12	Wifi Module	2.4G & 5.8G dual band

2.5 Display when Power Up

2.5.1 After booting up, during the loading process, the TV will first display the "Android" interface, and then there will be a booting animation of "Enjoy TV". When the load is complete, it will go to the home screen.




2.5.2 Home Screen display.

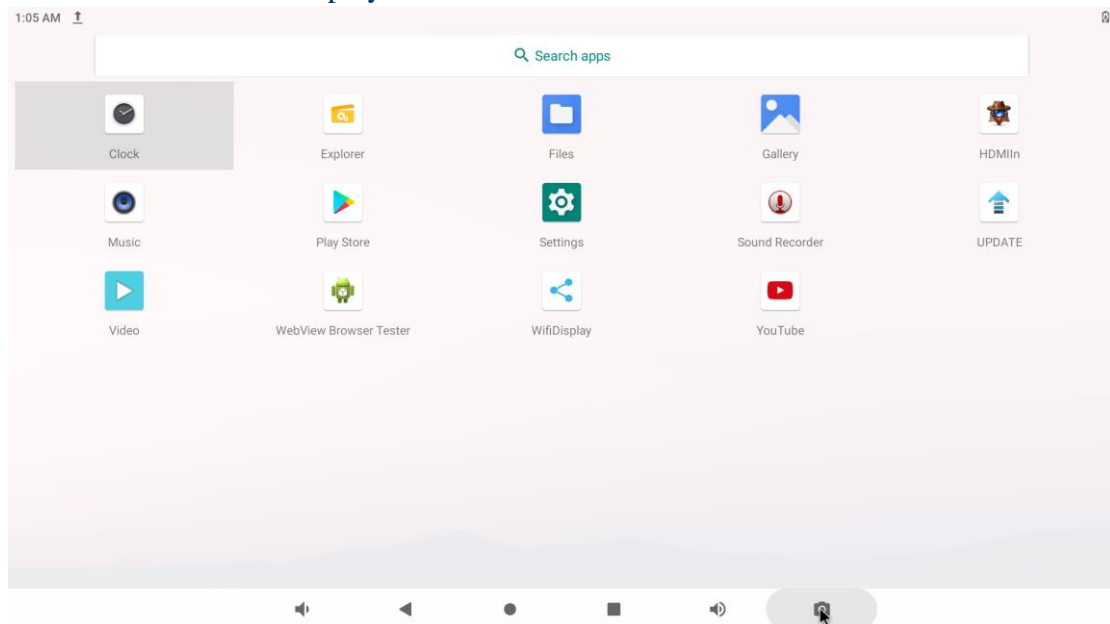


3. Settings

Select  icon then press OK key.

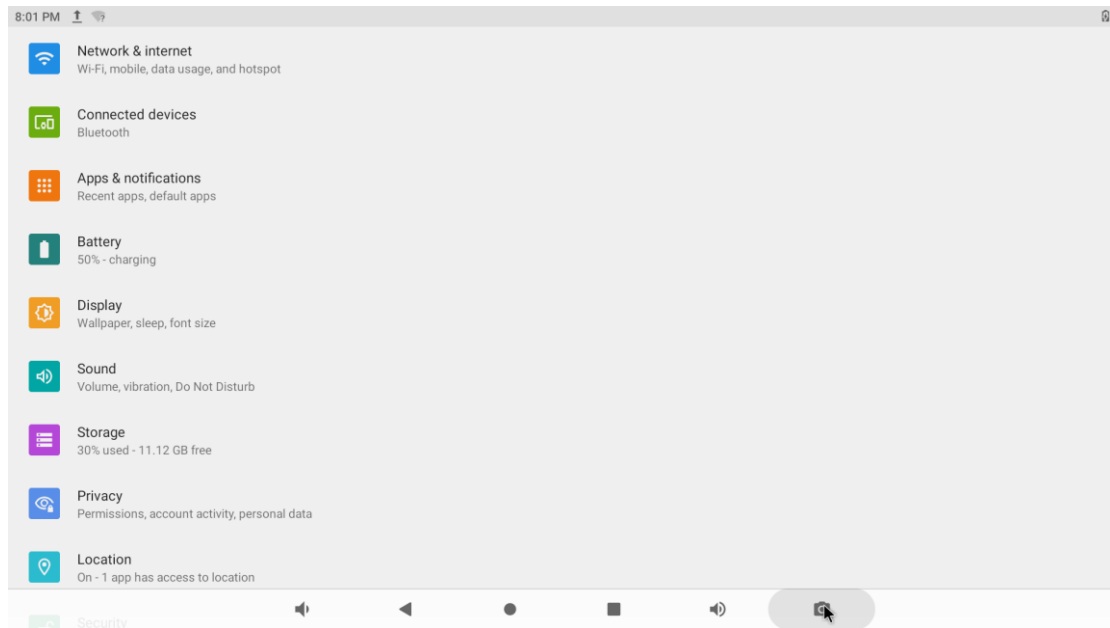


3.1 WiFi

3.1.1 It will automatically scan ambient WiFi networks when select “ON”. Connect an available WiFi network. If connect a secured WiFi network, corresponding password will be input firstly. Or fail to connect and need reset password. Once build up the connection with a certain WiFi network successfully, DB-PX30 will connect this WiFi network automatically when restart.
Note: If factory reset, the password of WiFi network have to be reset.

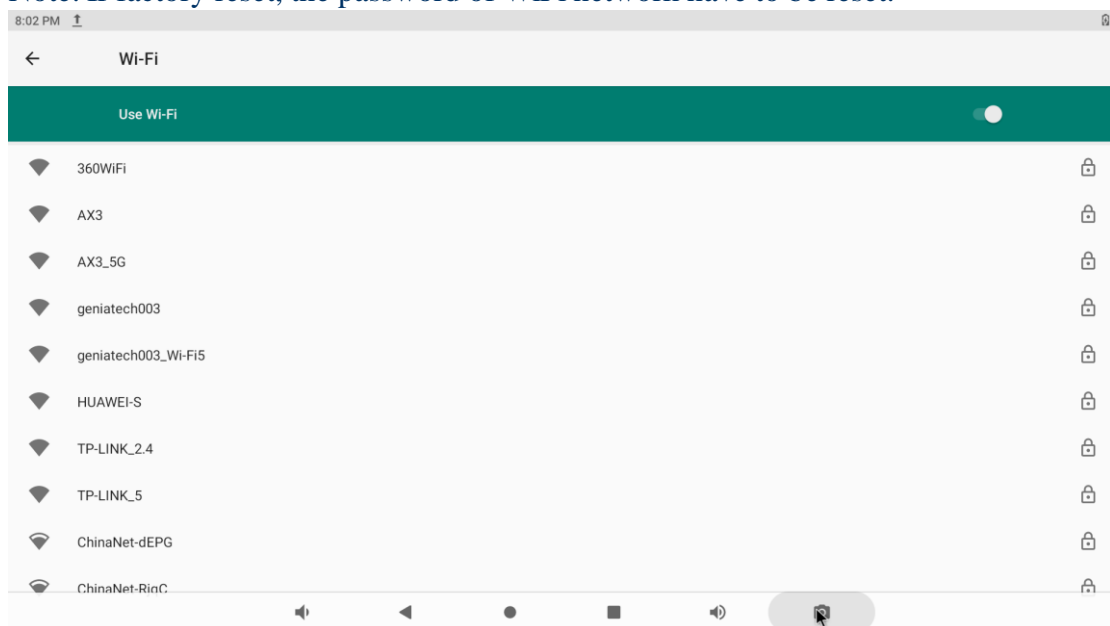


3.1.2 Wi-Fi hotspot


If you want to share WIFI with your friends, you can set the wi-fi hotspot here, set the wi-fi password, and turn on the hotspot switch for transmission.

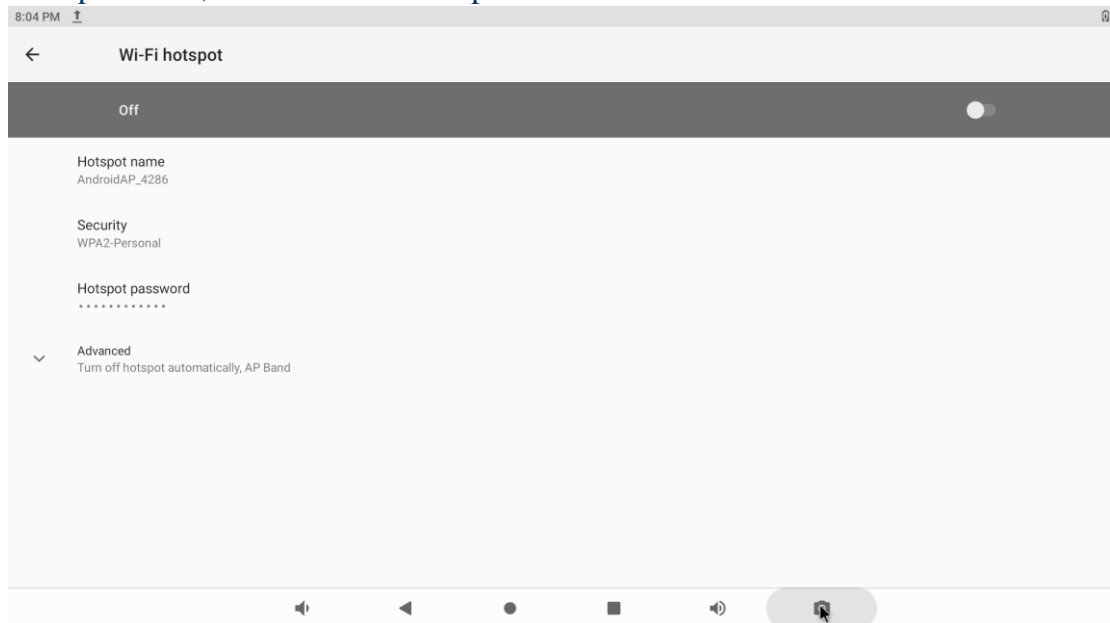

3.2 Bluetooth

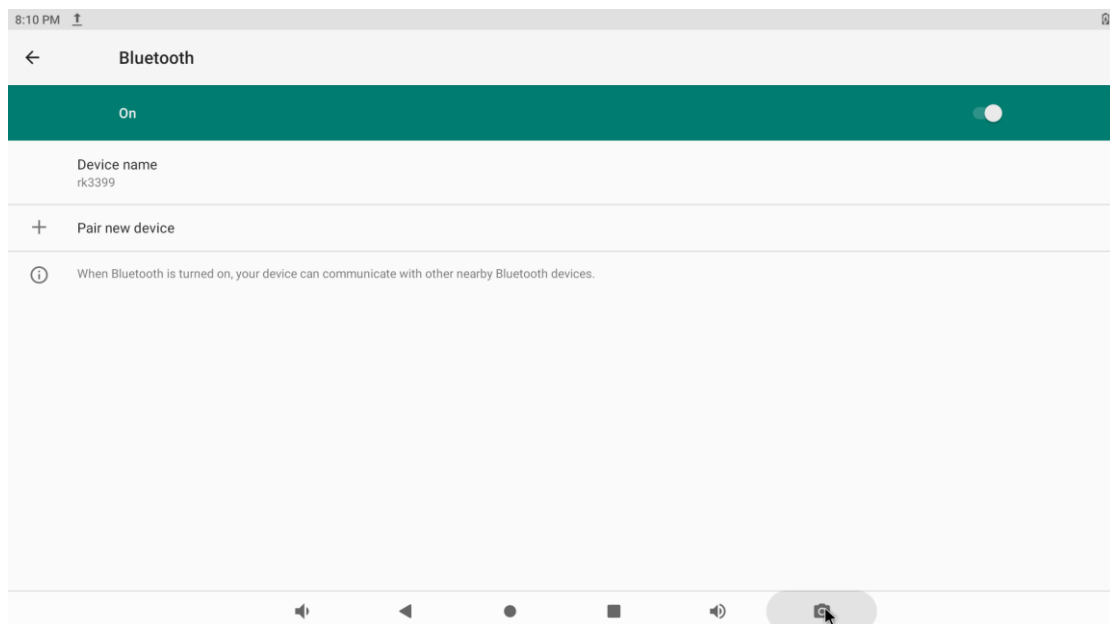


3.3 Ethernet

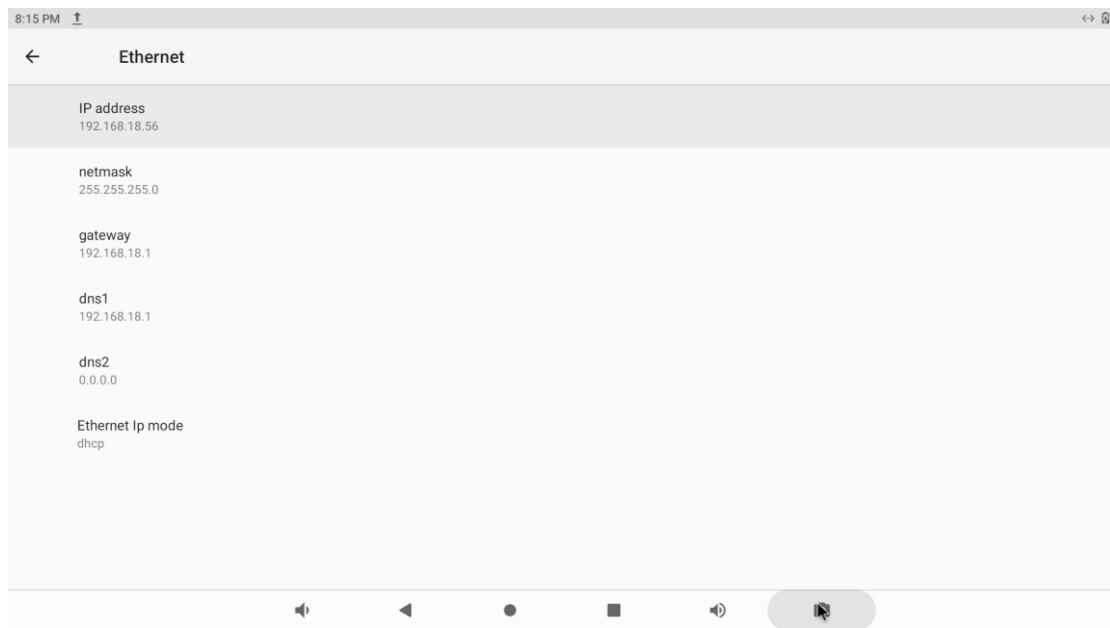


3.4 Data Saver

Data Saver prevents some apps from sending or receiving data in the background

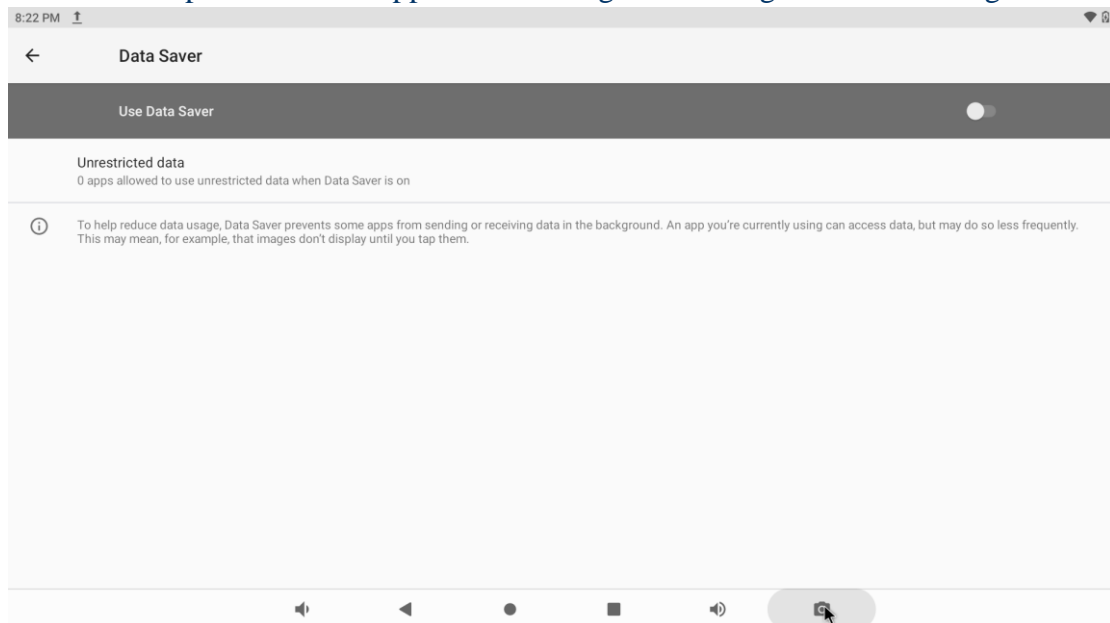


3.5 Networks & internet

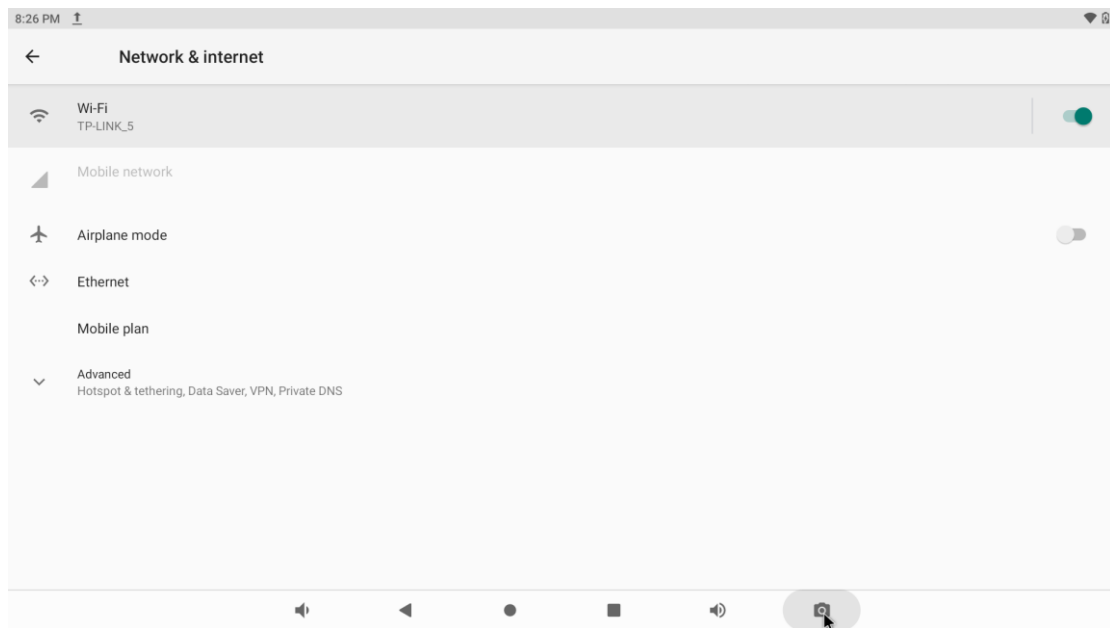

3.6 Multiple users

You can add user or configuration here

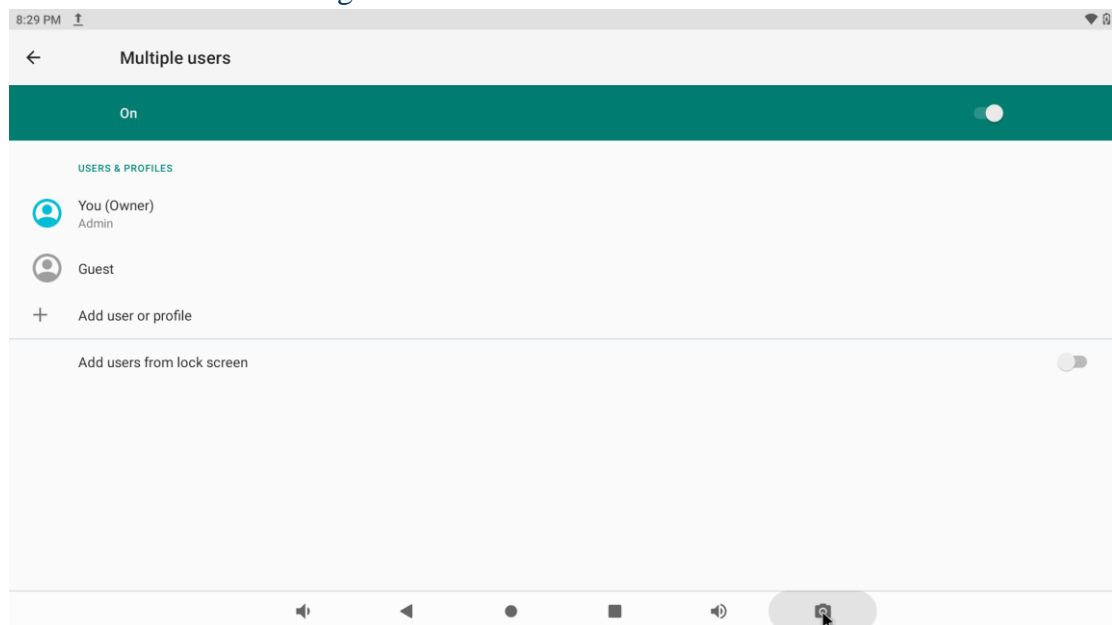

3.7 Sound

3.7.1 Volumes


Increase or decrease sound volumes

3.7.2 Touch Sounds

If enable Touch sound, sound will be heard while move remote controller.

3.7.3 Sound Input Devices


3.7.4 Sound Output Devices

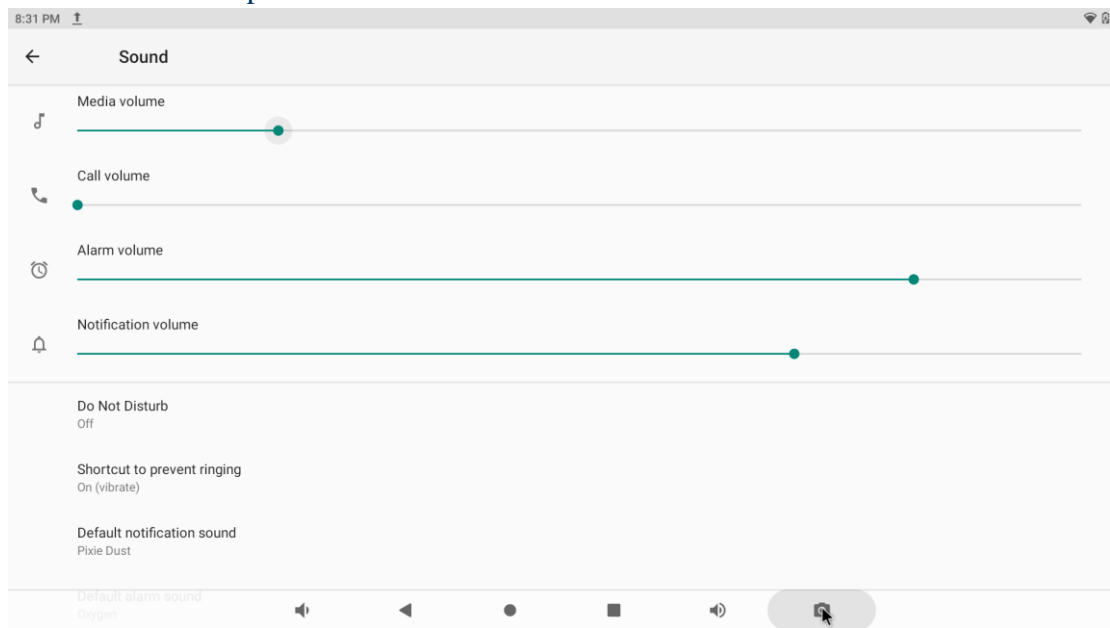

3.8 Display


3.8.1 Display size

make the items on your screen smaller or larger. Some apps on your screen may change position.

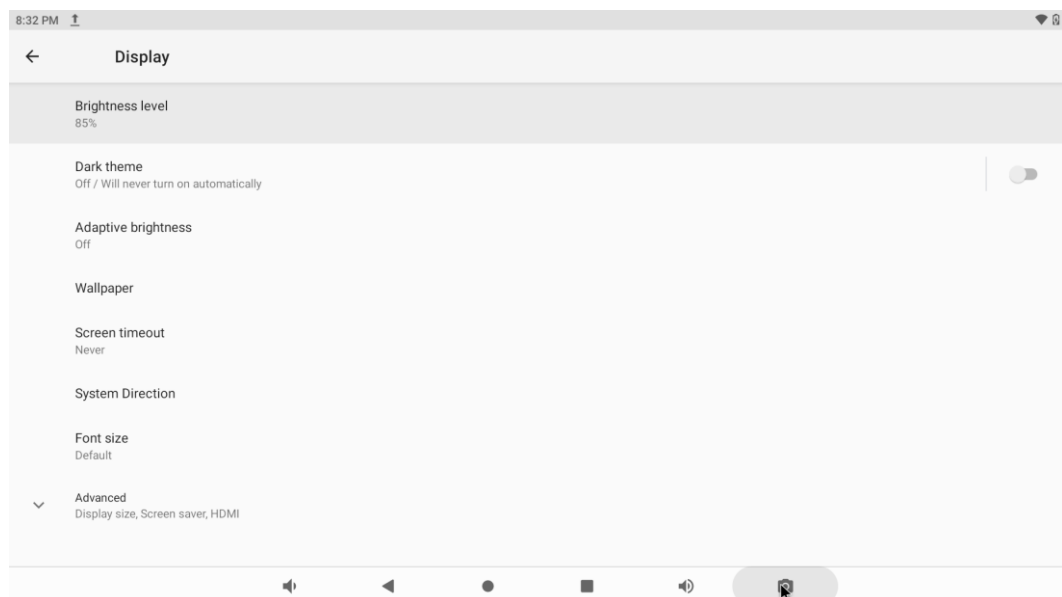


3.8.2 Font size

Change the font size of **OSD.**, Make the text on screen smaller or larger

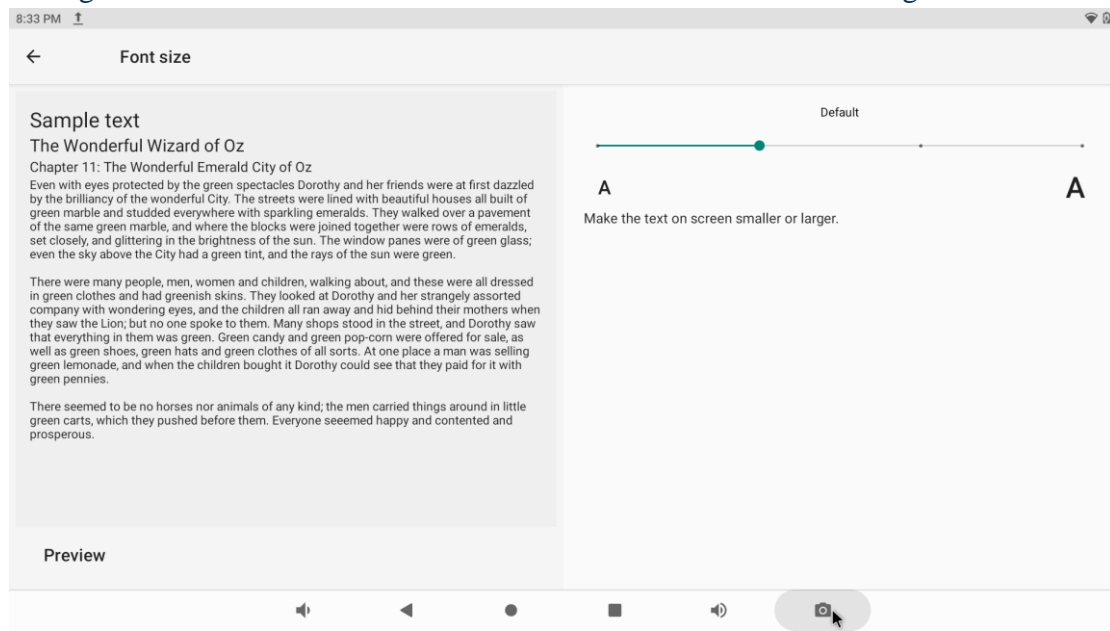


3.8.3 Cast screen

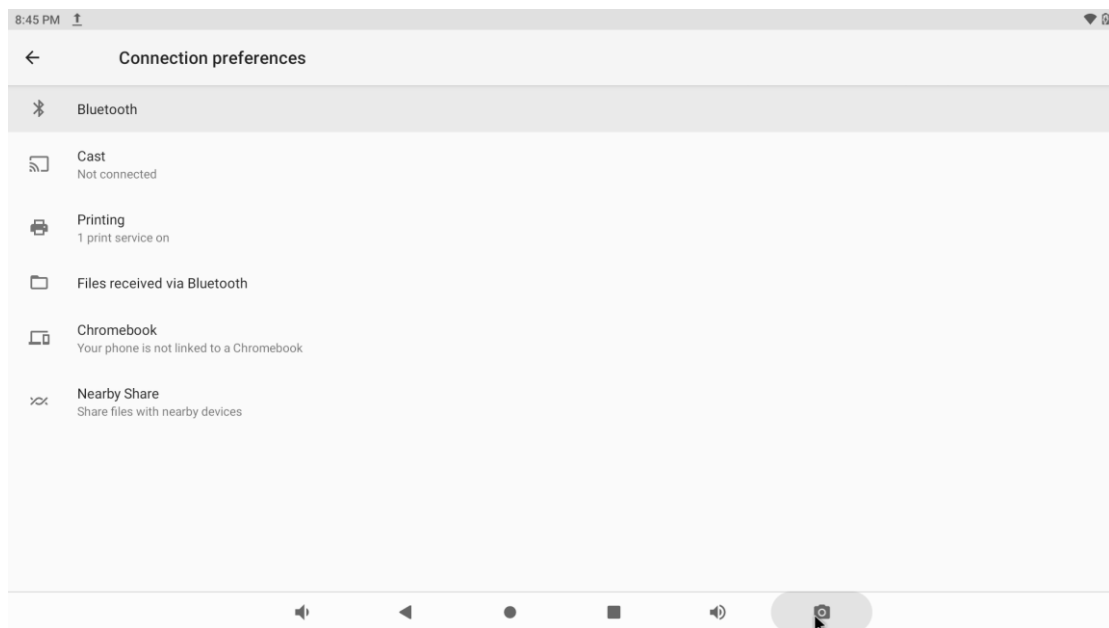

3.8.4 Screenshot

Here you can set the screen shot time and select the image location

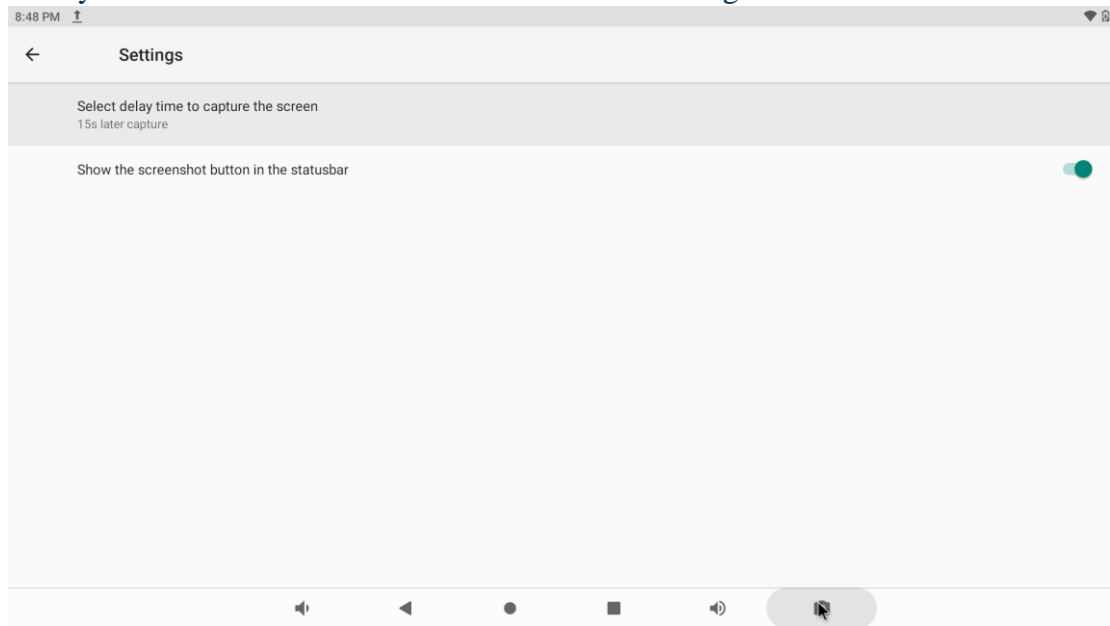


3.9 Storage

Shows the storage used of the OS and USB Storage.




3.10 Apps¬ifications

List all apps installed.

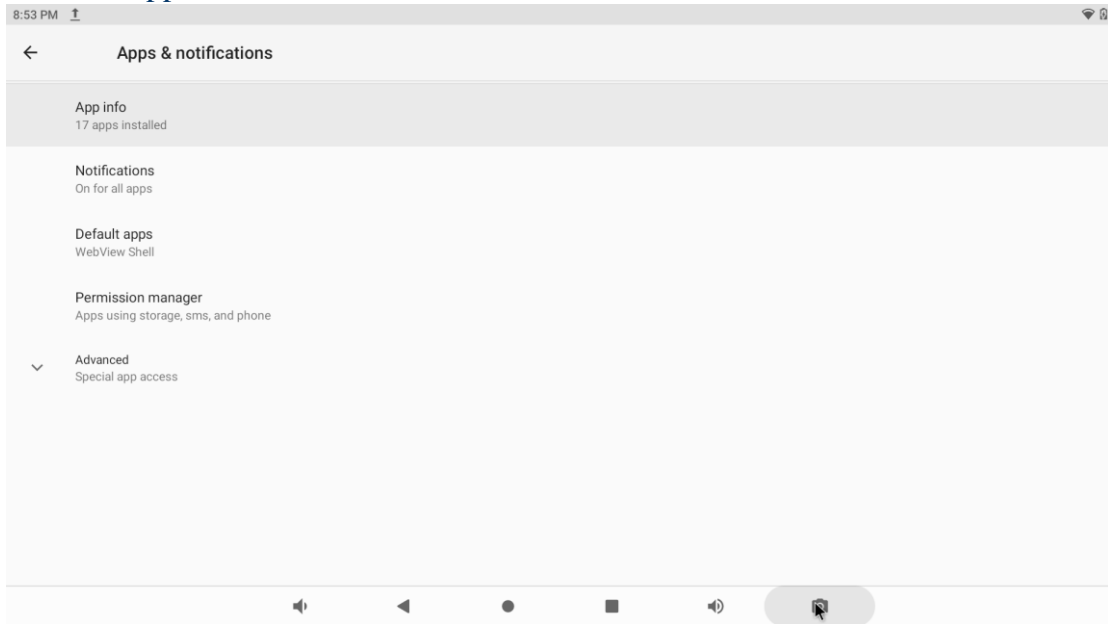


You can choose an application and force to shut down the app, uninstall the app, clear user data, move to USB storage and clear cache data.


3.11 Google services

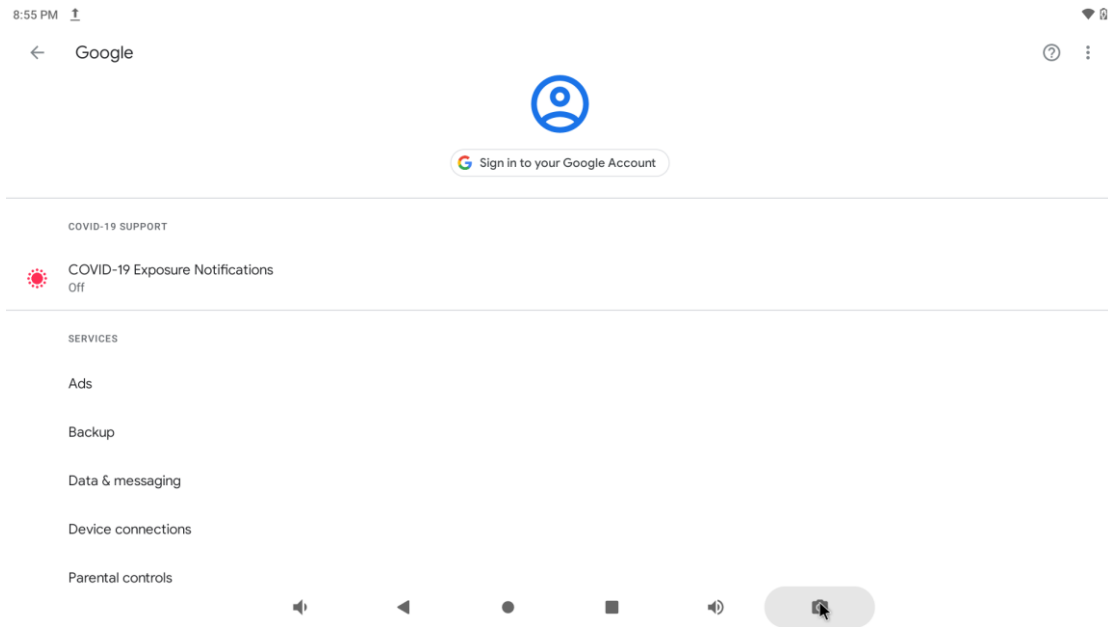


3.12 Notification

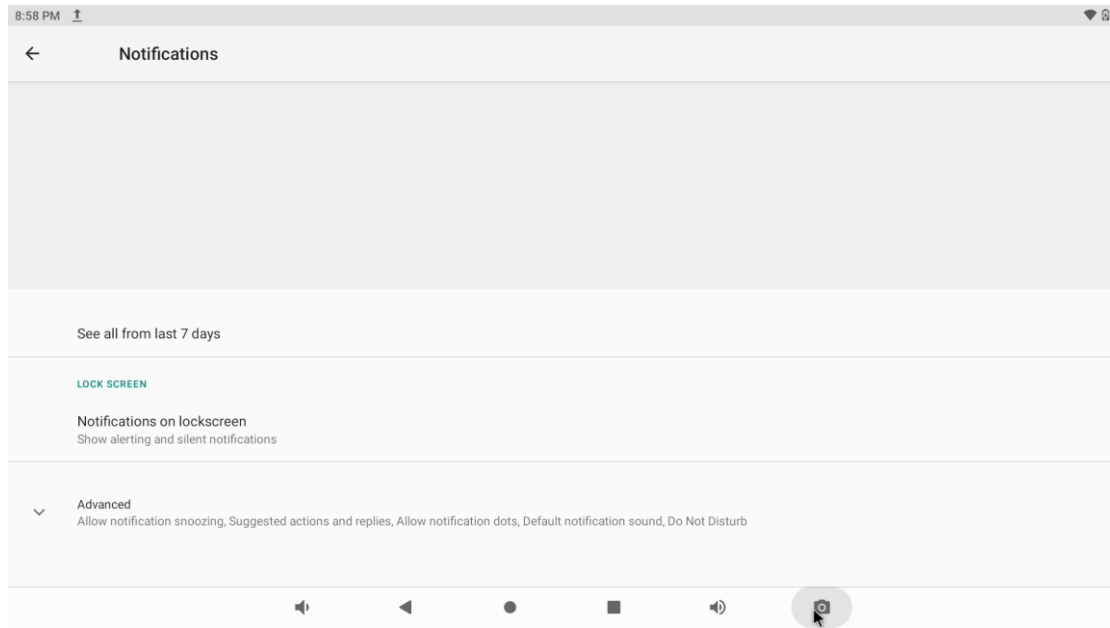


3.13 Location

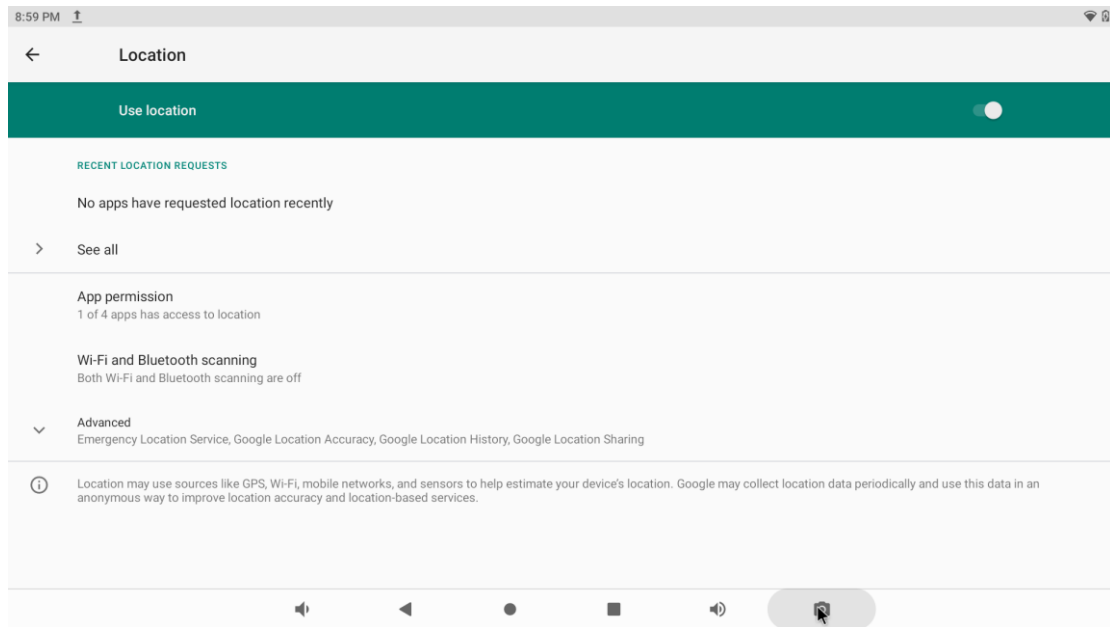

3.14 Security

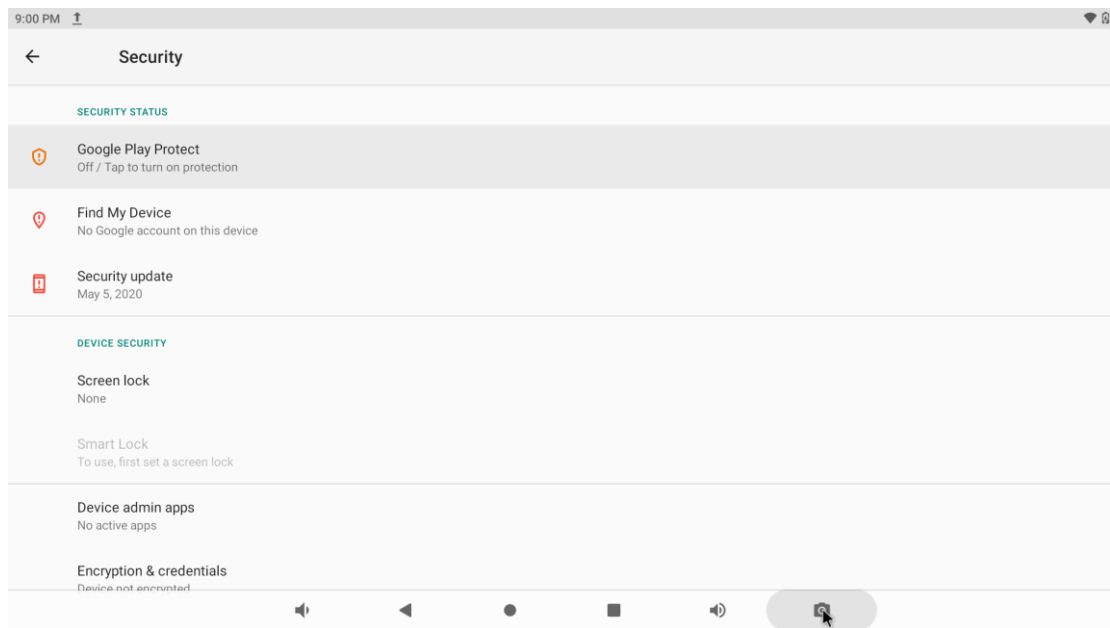

3.15 Languages & input

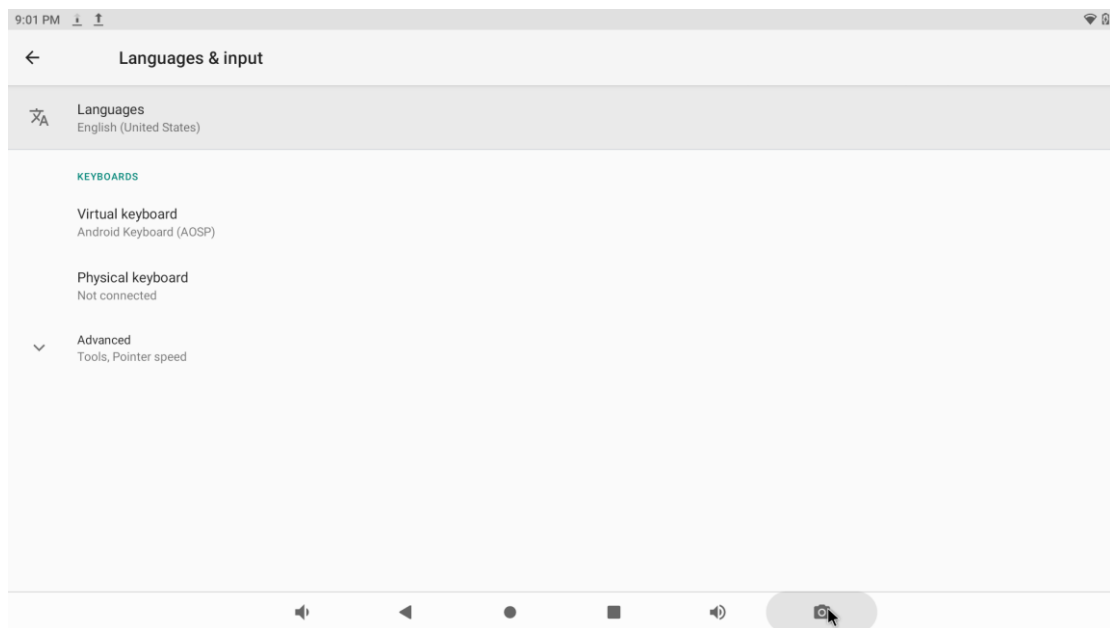


Change OSD language and input method.

The default input method is android standard keyboard.

If you are using our IR remote control, enter into “Default” option and switch to remote controller input method.

3.16 Reset options

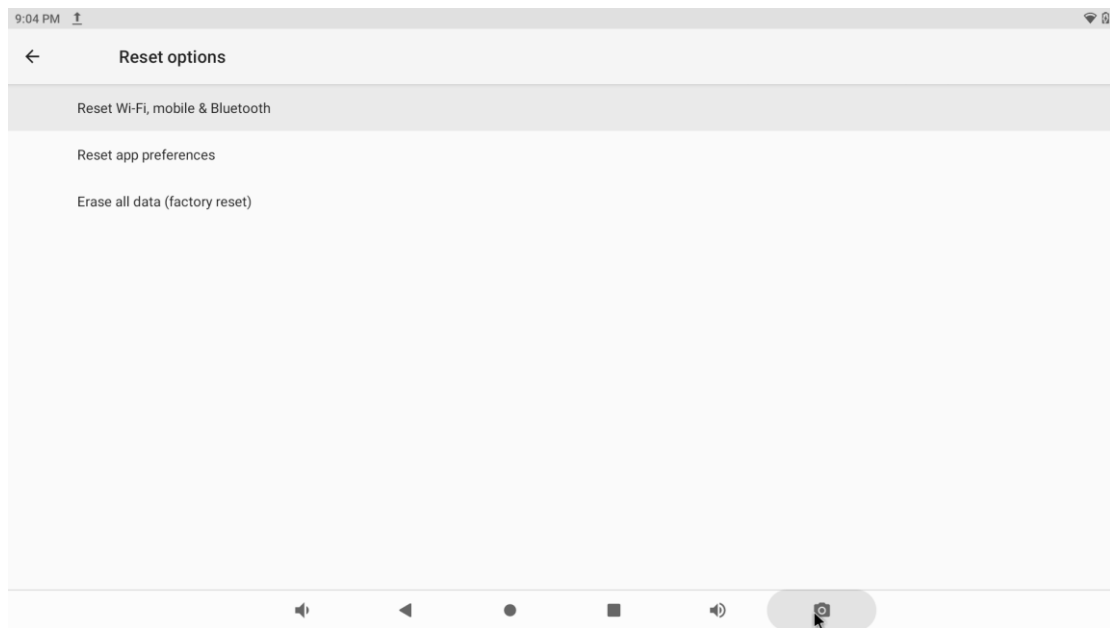


Factory data rest:

You can reset all the settings and apps to factory default.


Note: You might want to backup important data before resetting the box. Once you choose to rest to factory default, all data/apps will be deleted.

3.17 Sleep

Find the display button and find Sleep. You can select the Sleep time of the product. There are 8 options for sleep time. The shortest is 'Never' and the longest is 30 minutes.

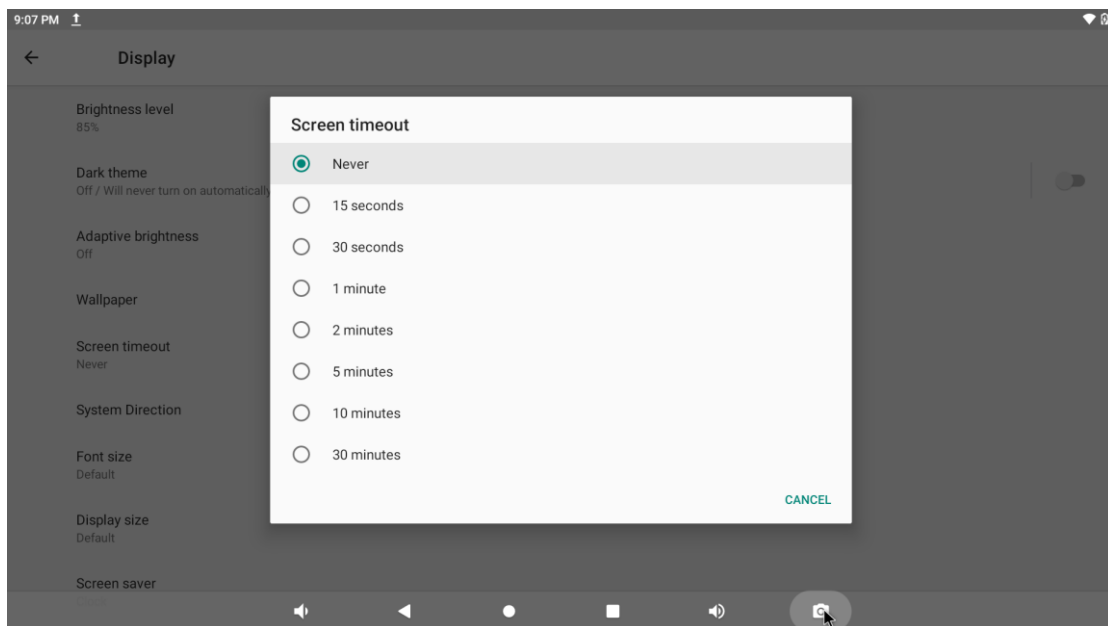

3.18 Add an account

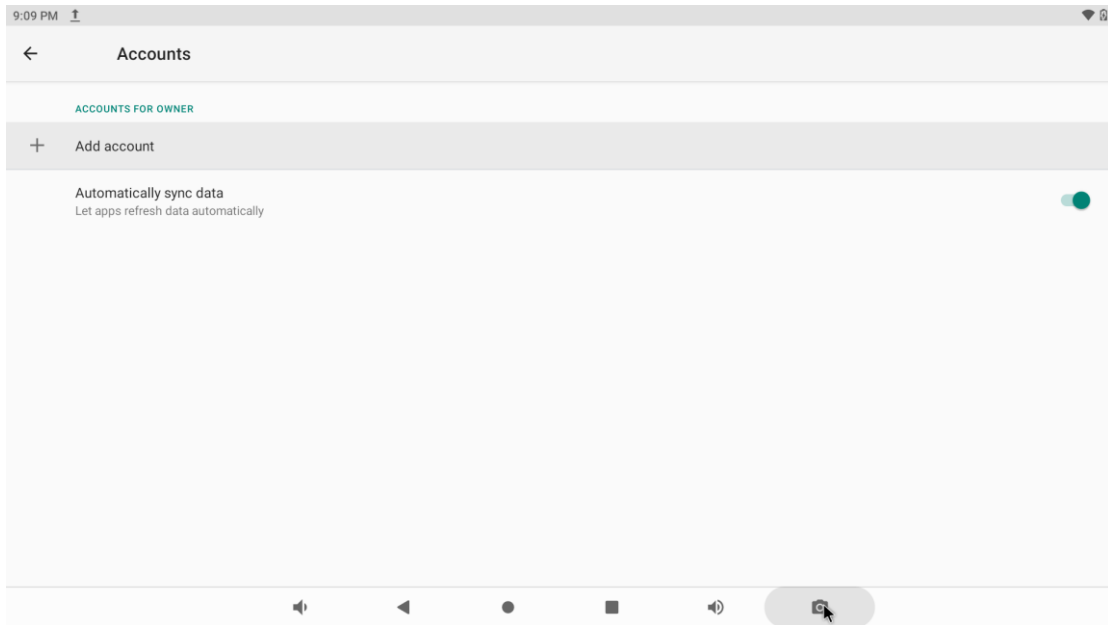


3.19 Date & time



3.20 Choose wallpaper from

Users can choose wallpaper photos from albums and historical wallpapers according to their preferences.

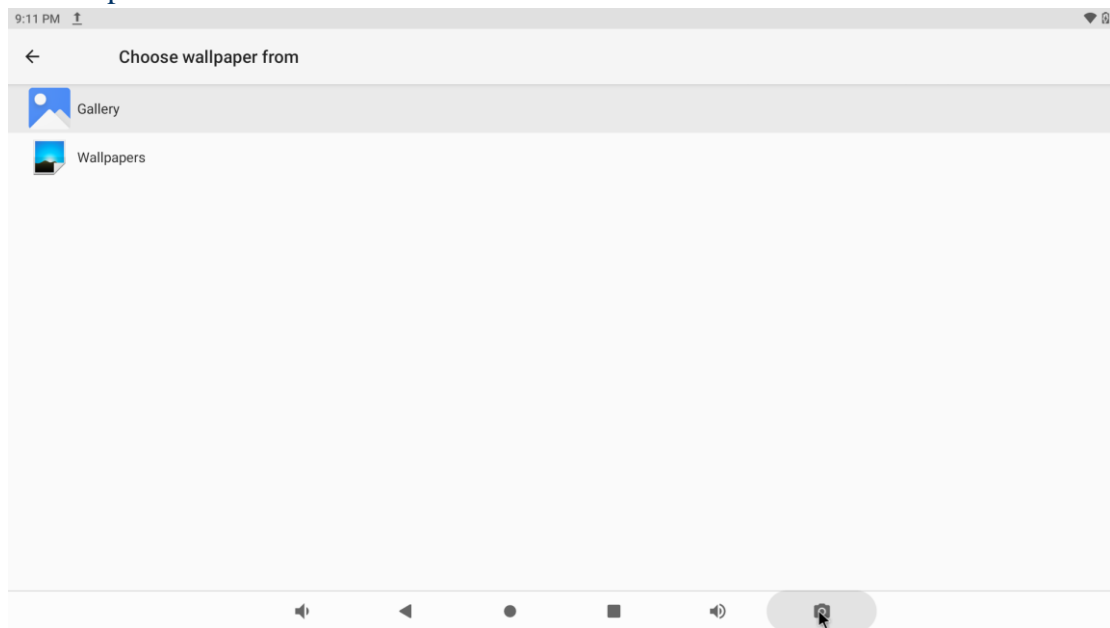


3.21 Screen saver


Interface Settings: can set the clock, color, theme, page photos.



3.22 About device.

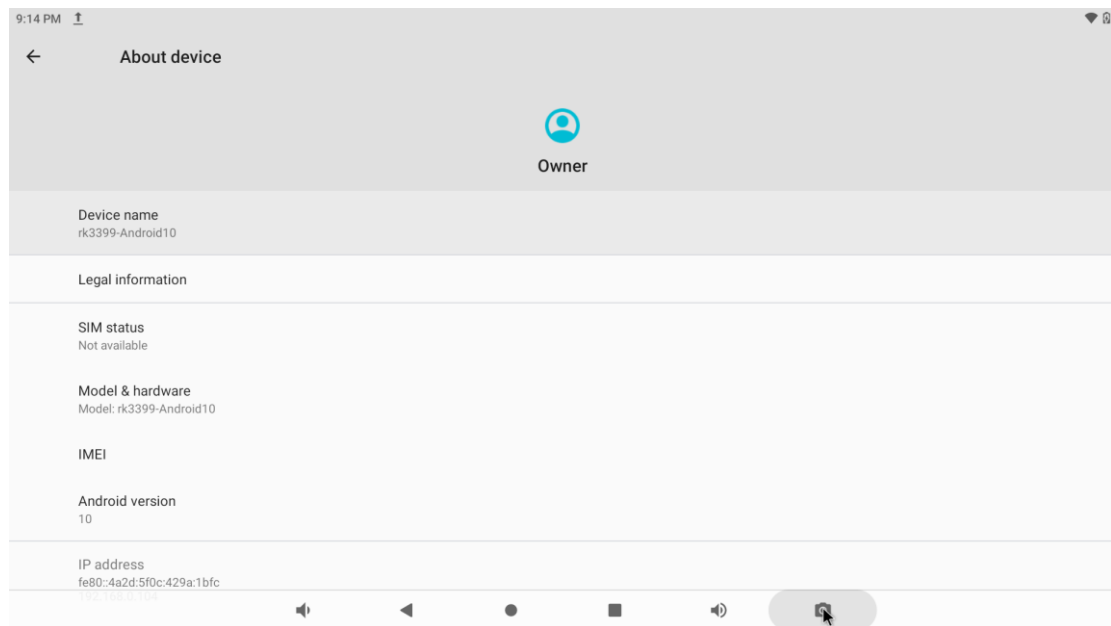


3.23 Camera settings

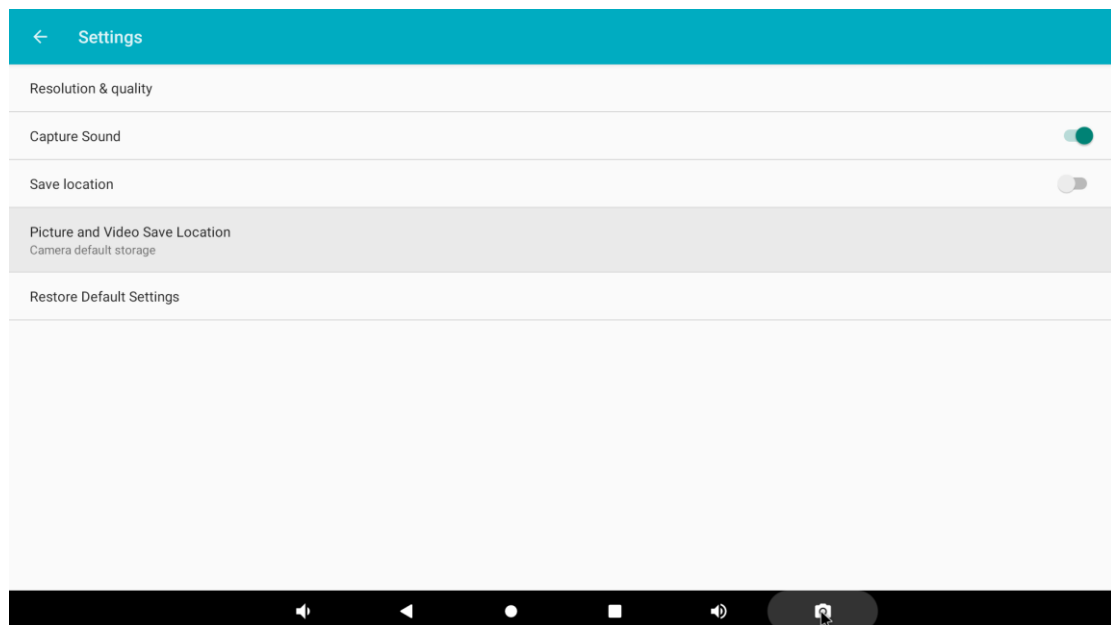

3.24 HDMI

User can set the screen, display resolution, zoom in/out screen, rotate screen, dual screen display in this part.

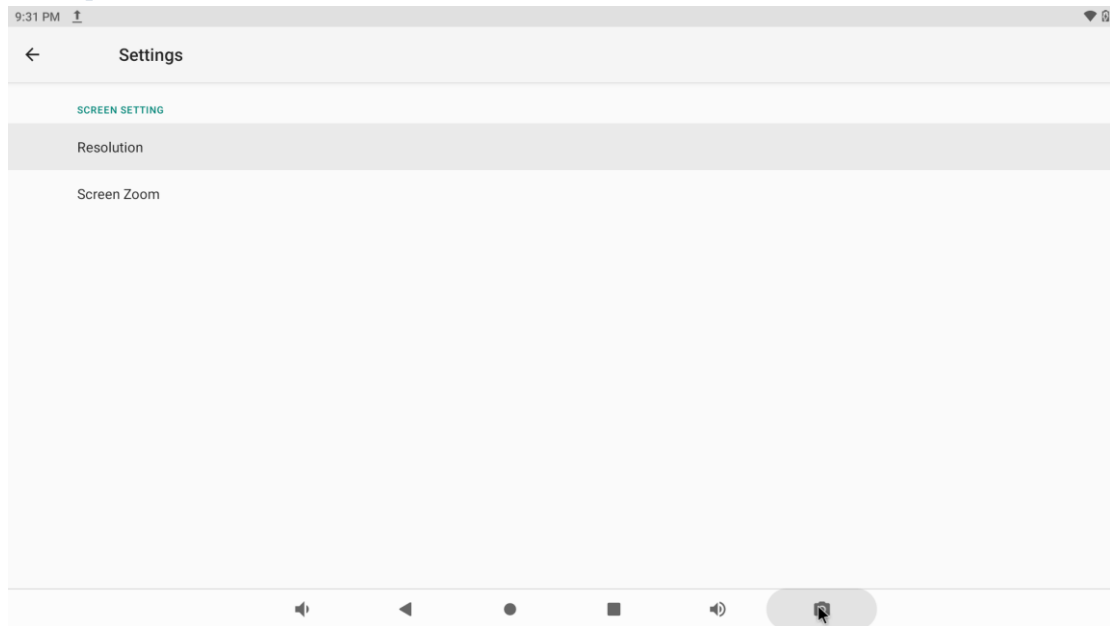

4. Apps Install & Uninstall

On DB-PX30, you can install apps from Android Market over the Internet or other sources, such as other online sources, the internal storage and the USB storage device that you have mounted onto DB-PX30.

You also can manage apps on DB-PX30 , install/uninstall apps, stop running apps, or select other options.

5. Firmware Update

You can download newest firmware from Geniatech Official website:
www.geniatech.com

6. Trouble Shooting/FAQ

6.1 No Picture

Refer to the TV user manual for how to select the correct video input channel.

6.2 USB Content cannot be read

. The format of USB storage device is not supported

- . The supported memory size is 256G maximum.
- . Make sure that this player supports these files.

6.3 Remote Controller cannot respond quickly to the pressing of keys

Make sure that batteries have enough power.

6.4 The firmware updating is not complete after a long time

If you update the firmware over the online service, it may take a long time to download the firmware update files from the server. To save your time, update the firmware through the USB storage or TF card.

7. Repairs

If you contact us to repair your player, an administration fee may be charged if either:

An engineer is called out to your home at your request and there is no defect in the product.

You bring the unit to a repair center and there is no defect in the product.

We will provide you with the amount of the administration fee before we make a home visit or begin any work on your player.

We recommend you read this manual thoroughly, search for a solution on line at www.geniatech.com, or contact Geniatech Customer Care before seeking to repair your player.

8. Specification

CPU	Quad-core Cortex-A35
GPU	Mali-G31 GPU
RAM	2G
ROM	16G eMMC
OS	Android 10.0

USB	1 x OTG, 1 x USB2.0 Host
HDMI	1*HDMI OUT
DC Input	12.0V-2A
TF Slot	TF Card
3.5mm Jack	Headphone
RJ45	10/100M Ethernet
LVDS	Up to 1920*1080
Video Output	HDMI+BT
MIPI DSI	4Lane

MPI CSI	4Lane
TP COB for GL680	*1

WiFi	IEEE 802.11 AC 2.4G &5.8G(optional)
BT	4.1(Optional 5.0)

Video Decoder	Real-time decoding of MPEG-4, H.264, H.265/HEVC, VP8, VC-1
	H.264/AVC Base/Main/High@level4.2; up to 1080P@60fps
	H.265/HEVC Main10 profile@level4.2; up to 1080P@60fps
	VP8, up to 1080P@60fps
	MPEG-4, ISO/IEC 14496-2, SP@L0-3, ASP@L0-5, up to 1080P @ 60fps
	VC-1, SP@ML, MP@HL, AP@L0-3, up to 1080P @ 60fps
	MVC is supported based on H.264 or H.265, up to 1080P @ 60fps
Video Encoder	Support H.264 video encoder at BP/MP/HP@level4.1
	Resolution and frame rate are up to 1920x1080@30FPS
	1x1080p@30fps or 2x720p@30fps encoding
JPEG Decoder	Decoder size is from 48x48 to 8176x8176(66.8Mpixels)
	Support JPEG ROI (region of image) decode

Size	140 mm * 113 mm
Power Adapter	AC100 ~ 240V 50/60Hz
Optional Remote Controller	2.4G wireless Remote Controller with Nano receiver USB wire/wireless Mouse & Keyboard

9. Trademark Notice



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in United States and other countries.